Service Manual

Pioneer

CDX-P1250/X1N/UC

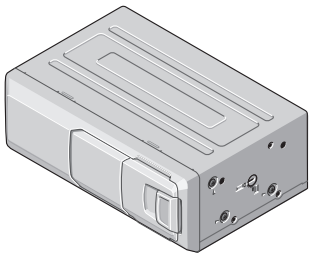

ORDER NO.
CRT2318

MULTI-COMPACT DISC PLAYER

CDX-P1250 X1N/UC

CDX-P1250 X1N/EW

CDX-P1250 X1N/ES

COMPACT disc DIGITAL AUDIO

- **See the separate manual CX-938(CRT2357) for the CD mechanism description, disassembly and circuit description.**
- **The CD mechanism employed in this model is one of C8 series.**

CONTENTS

1. SAFETY INFORMATION 3
2. EXPLODED VIEWS AND PARTS LIST 4
3. SCHEMATIC DIAGRAM 12
4. PCB CONNECTION DIAGRAM 20
5. ELECTRICAL PARTS LIST 26
6. ADJUSTMENT.....29
7. GENERAL INFORMATION 35
   7.1 IC 35
   7.2 DIAGNOSIS 40
      7.2.1 DISASSEMBLY 40
      7.2.2 TEST MODE 42
   7.3 BLOCK DIAGRAM 48
8. OPERATIONS AND SPECIFICATIONS.....50

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

© **PIONEER ELECTRONIC CORPORATION 1999**

K-ZZY. FEB. 1999 Printed in Japan

● **CD Player Service Precautions**

1. For pickup unit(CXX1285) handling, please refer to"Disassembly"(See page 40). During replacement, handling precautions shall be taken to prevent an electrostatic discharge(protection by a short pin).
2. During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.
3. Please checking the grating after changing the pickup unit(see page 29) since these screws protects the mechanism during transport, be sure to affix it when it is transported for repair, etc.

Transportation of multi-CD Player

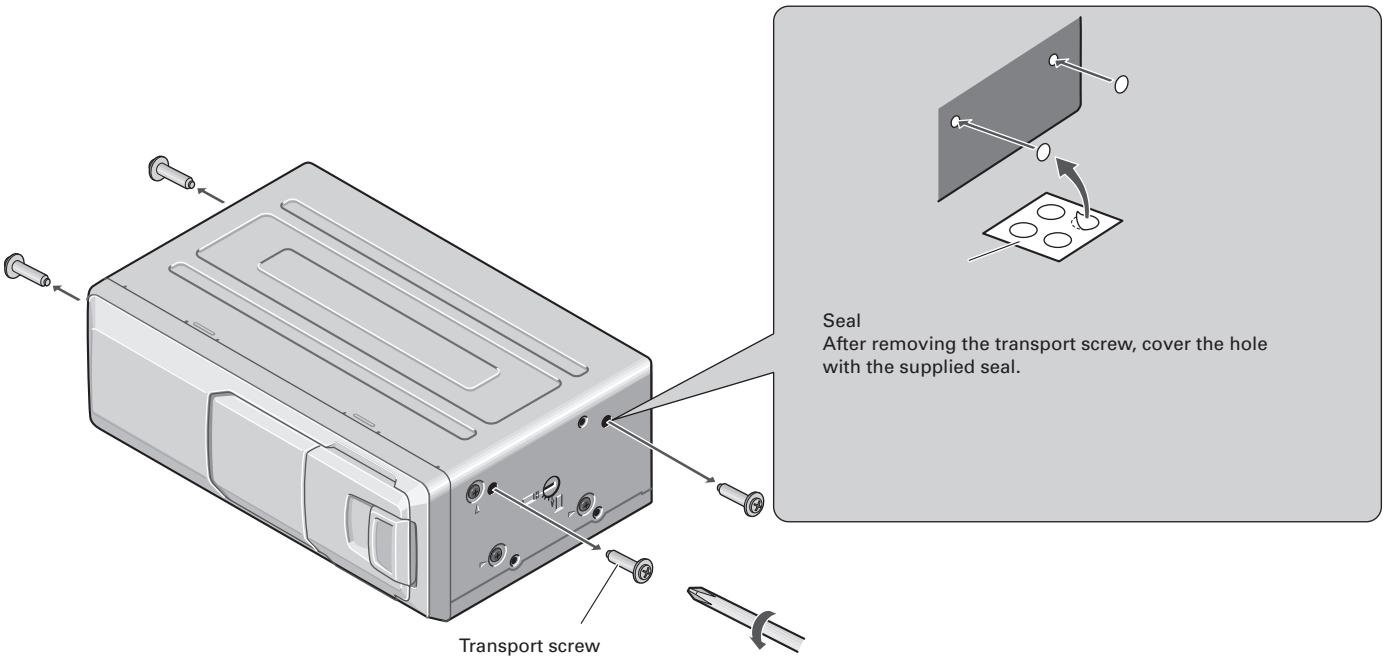
Seal
After removing the transport screw, cover the hole with the supplied seal.
Transport screw
Attach to the original position before transporting the set.

A transport screw has been attached to the set in order to protect it during transportation. After removing the transport screw, cover the hole with the supplied seal. Be sure to remove the transport screw before mounting the set. The removed transport screw should be retained in the accessory bag for use the next time the set is transported.

1. SAFETY INFORMATION

1.1 CDX-P1250/X1N/UC

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.
Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty.
If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

1.2 CDX-P1250/X1N/EW

1. Safety Precautions for those who Service this Unit.

- **Follow the adjustment steps (see pages 29 through 34)in the service manual when servicing this unit. When checking or adjusting the emitting power of the laser diode exercise caution in order to get safe, reliable results.**

Caution:

1. **During repair or tests, minimum distance of 13cm from the focus lens must be kept.**
2. **During repair or tests, do not view laser beam for 10 seconds or longer.**

2. A "CLASS 1 LASER PRODUCT" label is affixed to the rear of the player.

3. The triangular label is attached to the mechanism unit frame.

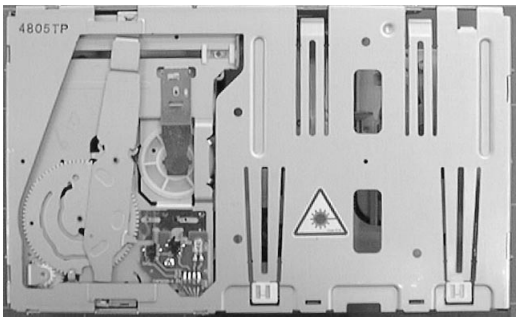

4. Specifications of Laser Diode

Specifications of laser radiation fields to which human access is possible during service.
Wavelength = 800 nanometers

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

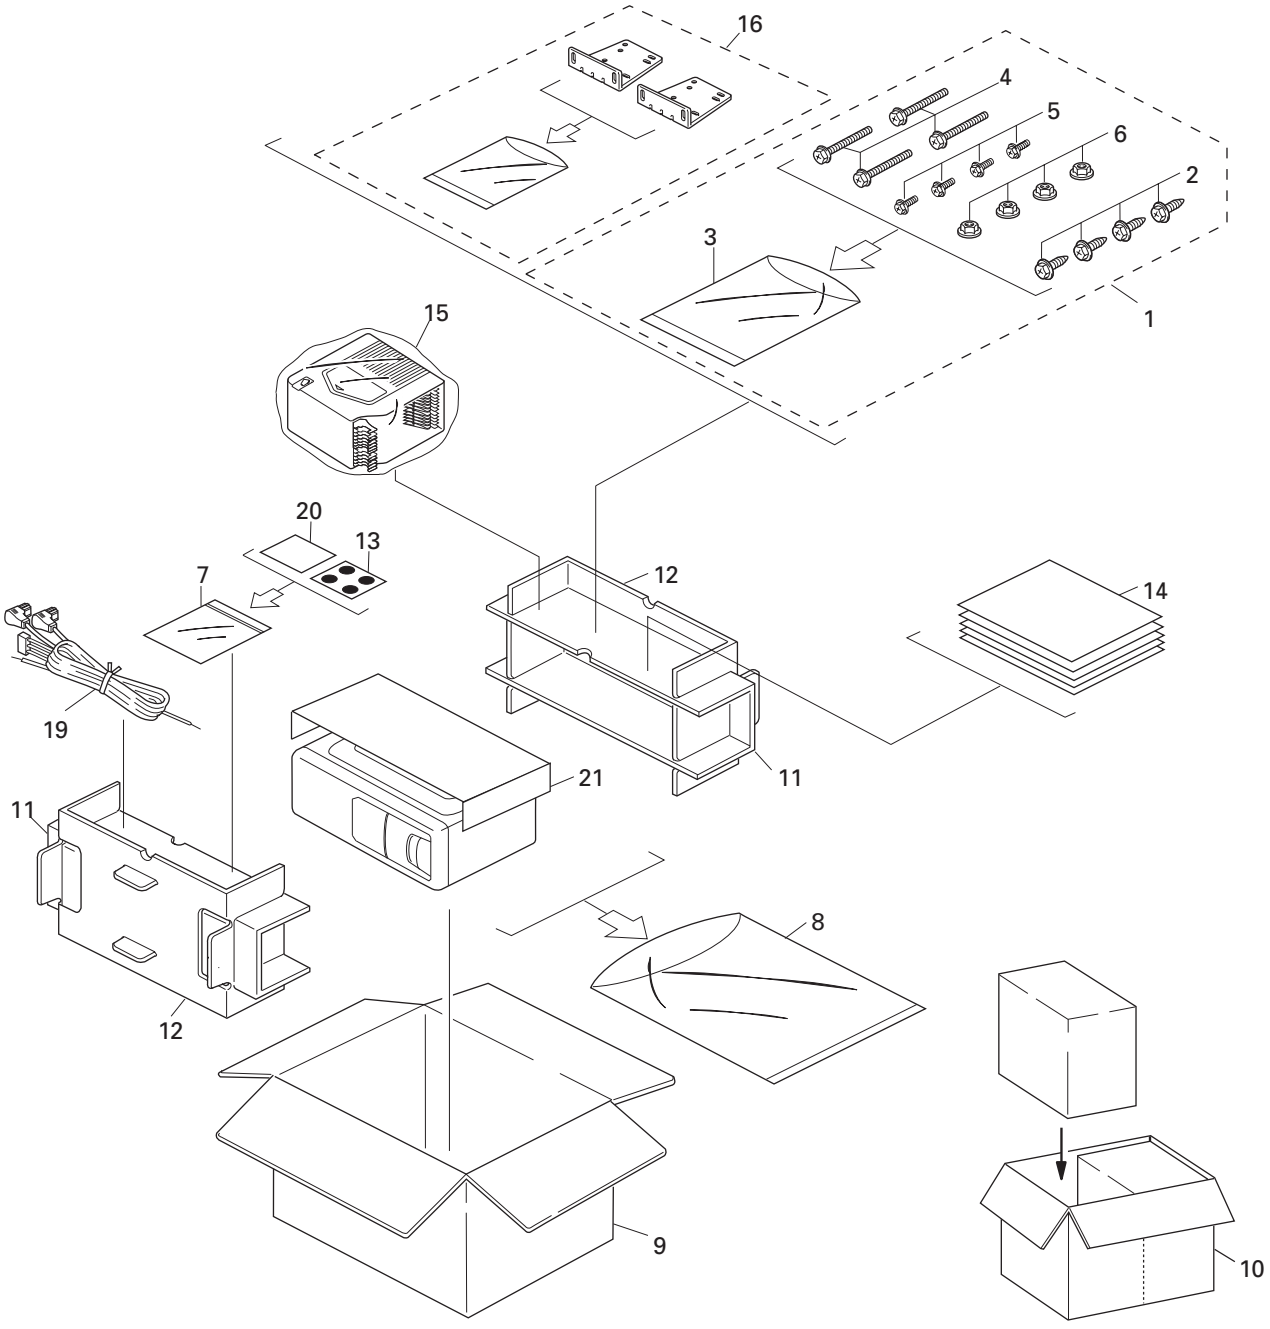

NOTE:

● Parts marked by "*"are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.

● PACKING SECTION PARTS LIST

Mark	No.	Description	Part No. CDX-P1250/X1N/UC	CDX-P1250/X1N/EW	CDX-P1250/X1N/ES
	1	Screw Assy	CEA1962	CEA1962	CEA1962
	2	Screw	CBA1295	CBA1295	CBA1295
*	3	Polyethylene Sheet	CNM5158	CNM5158	CNM5158
	4	Screw	HMB60P500FMC	HMB60P500FMC	HMB60P500FMC
	5	Screw	HMF40P080FZK	HMF40P080FZK	HMF40P080FZK
	6	Nut	NF60FMC	NF60FMC	NF60FMC
*	7	Polyethylene Bag	CEG1099	CEG1099	CEG1099
	8	Polyethylene Bag	CEG1174	CEG1026	CEG1026
	9	Carton	CHG3717	CHG3718	CHG3719
	10	Contain Box	CHL3717	CHL3718	CHL3719
	11	Protector	CHP2136	CHP2136	CHP2136
	12	Protector	CHP2137	CHP2137	CHP2137
	13	Seal	CNM5599	CNM5741	CNM5741
	14-1	Owner's Manual	CRD2895	CRD2896	CRD2898
	14-2	Owner's Manual	Not used	CRD2897	CRB1533
*	14-3	Warranty Card	Not used	CRY1087	Not used
*	14-4	Caution Card	CRP1201	CRP1203	CRP1202
*	14-5	Caution Card	CRP1205	CRP1205	CRP1205
	15	Magazine Assy	CXB4028	CXB4028	CXB4028
	16	Angle Assy	CXB3589	CXB3590	CXB3590
	17	•••••			
	18	•••••			
	19	Cord	CDE5831	CDE5830	CDE5831
*	20	Caution Card	CRP1090	CRP1090	CRP1090
*	21	Caution Card	CRP1196	CRP1196	CRP1196

● Owner's Manual

Model	Part No.	Language
CDX-P1250/X1N/UC	CRD2895	English, French
CDX-P1250/X1N/EW	CRD2896	English, Italian, French
	CRD2897	German, Dutch, Spanish
CDX-P1250/X1N/ES	CRD2898	English, Spanish, Portuguese(B), Arabic
	CRB1533	Chinese

2.2 EXTERIOR

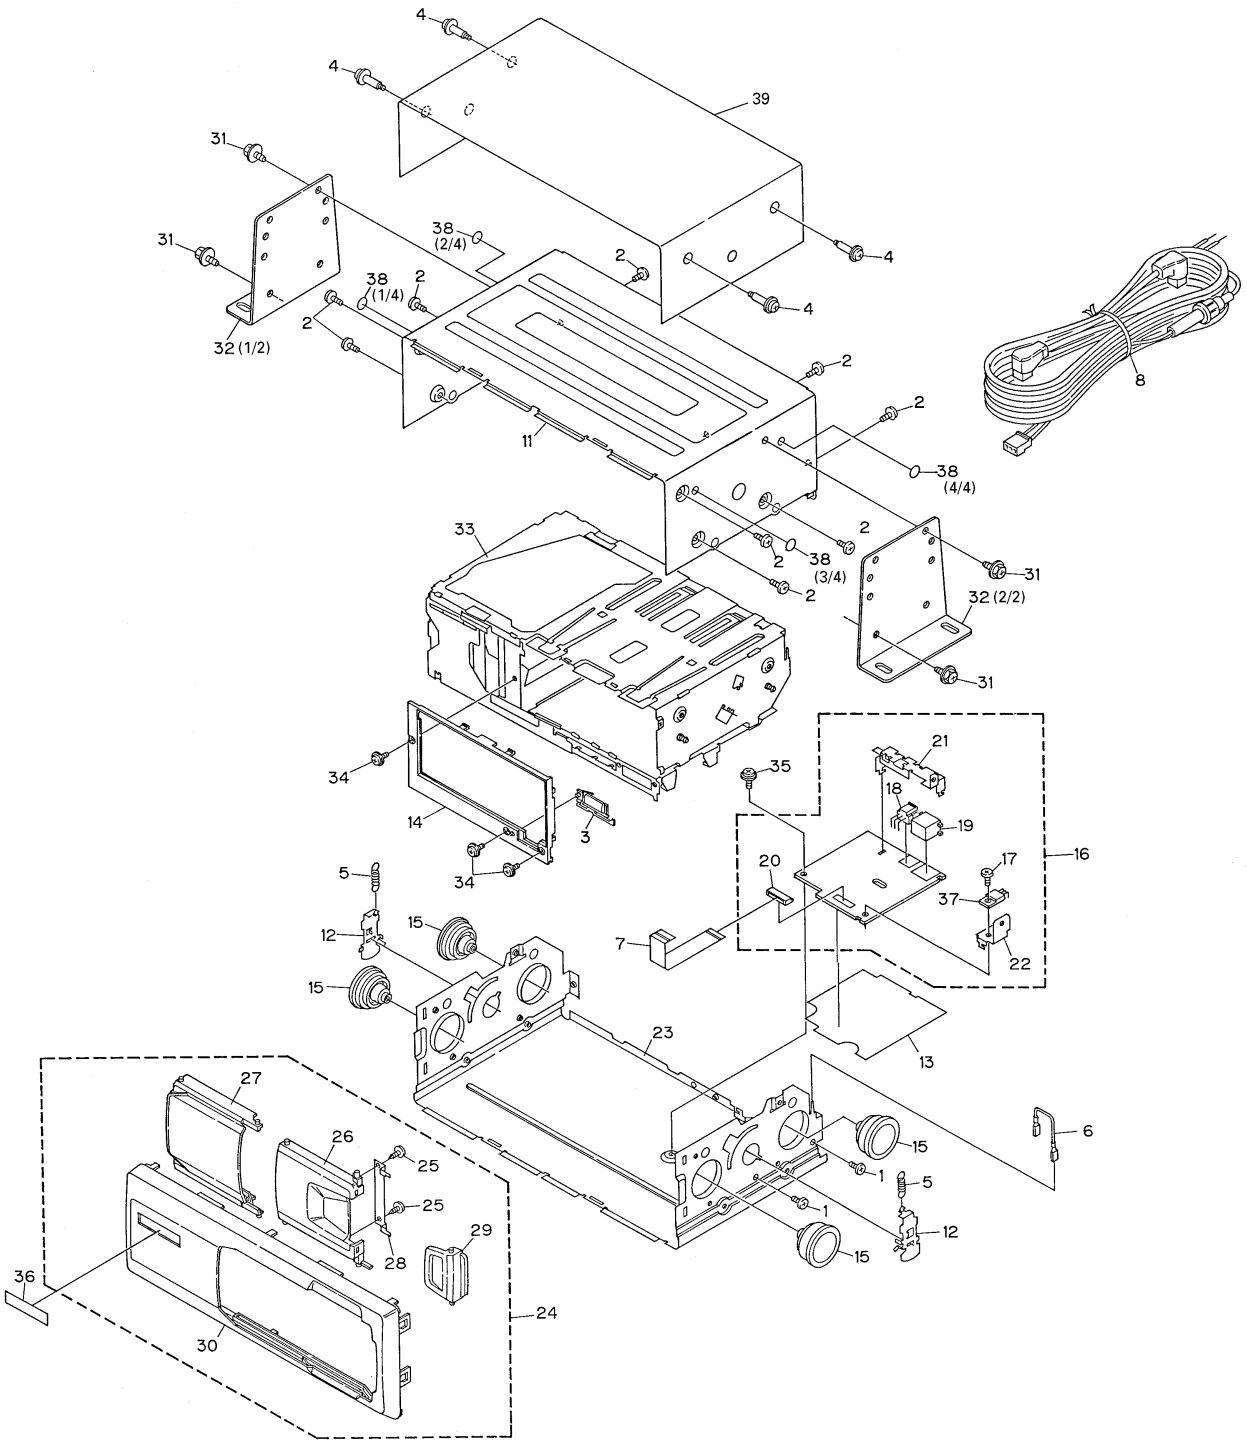
4
4
39
31
31
38 (2/4)
2
4
38 (1/4)
2
2
32 (1/2)
4
2
8
11
2
2
38 (4/4)
33
2
38 (3/4)
2
31
32 (2/2)
31
34
14
3
34
21
35
18
19
16
5
20
17
37
12
15
7
22
15
23
13
27
6
26
25
15
1
25
5
1
29
12
28
15
36
24
30

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ26P040FMC
2	Screw	BMZ30P040FZK
3	Button	CAC4632
4	Screw	CBA1353
5	Spring	CBH1862
6	Connector	CDE5525
7	Connector	CDE5783
8	Cord	See Contrast table(2)
9	•••••	
10	•••••	
11	Upper Case	See Contrast table(2)
12	Arm	CNC8058
13	Insulator	CNM6074
14	Panel	CNS5218
15	Damper	CNV5227
16	Power Unit	CWX2300
17	Screw	BMZ26P060FMC
18	Plug(CN901)	CKS-460
19	Connector(CN921)	CKS3407
20	Connector(CN911)	CKS4072
21	Holder	CNC8059
22	Holder	CNC8060
23	Lower Case Unit	See Contrast table(2)
24	Grille Unit	See Contrast table(2)
25	Screw	BPZ20P080FMC

Mark No.	Description	Part No.
26	Door	See Contrast table(2)
27	Door	See Contrast table(2)
28	Holder	CNC8141
29	Lever	See Contrast table(2)
30	Grille	See Contrast table(2)
31	Screw	HMF40P080FZK
32	Angle Assy	See Contrast table(2)
33	CD Mechanism Module	See Contrast table(2)
34	Screw	IMS20P035FZK
35	Screw	IMS26P040FMC
36	Sheet	See Contrast table(2)
37	Transistor(Q910)	2SD2396
38	Seal	See Contrast table(2)
39	Caution Card	CRP1196

(2) CONTRAST TABLE

CDX-P1250/X1N/UC, CDX-P1250/X1N/EW and CDX-P1250/X1N/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		CDX-P1250/X1N/UC	CDX-P1250/X1N/EW	CDX-P1250/X1N/ES
8	Cord	CDE5831	CDE5830	CDE5831
11	Upper Case	CNB2449	CNB2390	CNB2390
23	Lower Case Unit	CXB3398	CXB3397	CXB3397
24	Grille Unit	CXB4385	CXB4386	CXB4387
26	Door	CAT2023	CAT2008	CAT2008
27	Door	CAT2024	CAT2009	CAT2009
29	Lever	CNS5393	CNS5357	CNS5357
30	Grille	CNS5294	CNS5293	CNS5295
32	Angle Assy	CXB3589	CXB3590	CXB3590
33	CD Mechanism Module	CXK4900	CXK4905	CXK4900
36	Sheet	CAH1683	CAH1681	CAH1681
38	Seal	CNM5599	CNM5741	CNM5741

2.3 CD MECHANISM MODULE

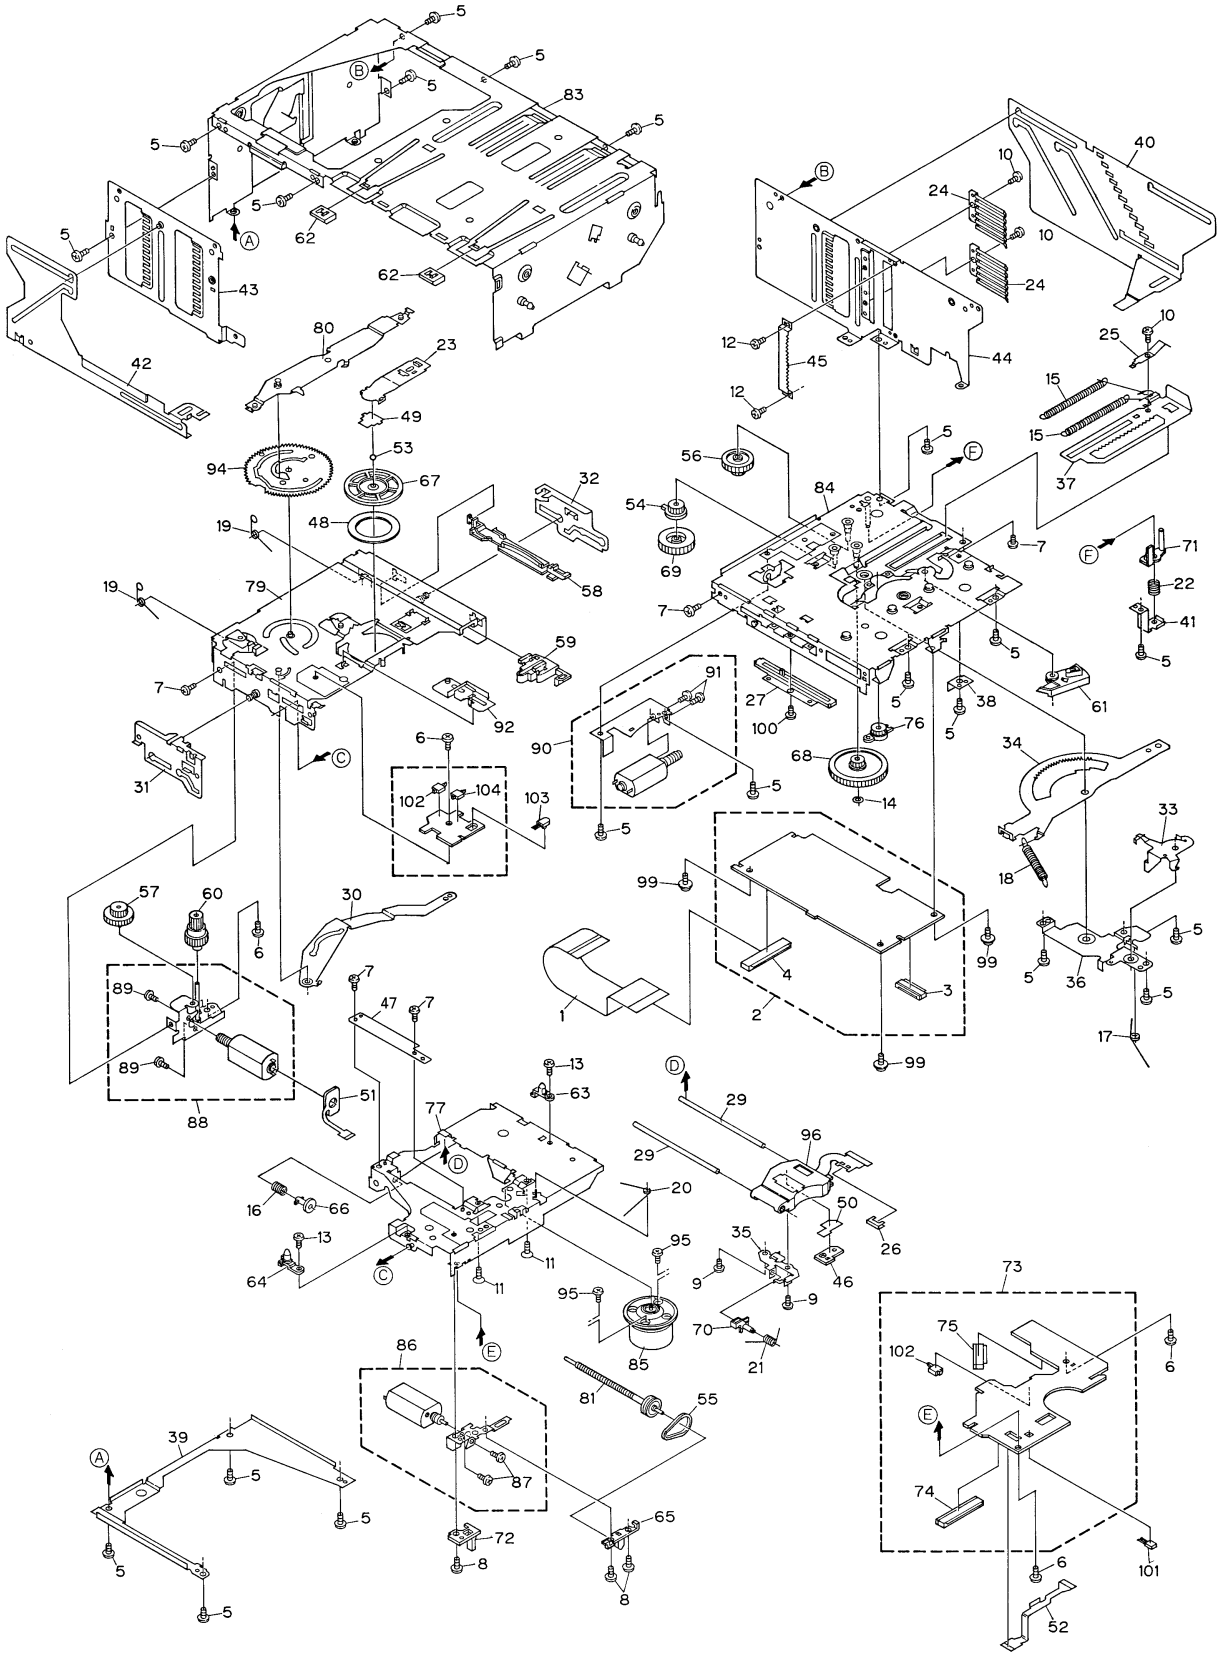

(1)CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	Connector	CDE6069
2	CD Core Unit(C8)	See Contrast table(2)
3	Connector(CN701)	CKS1953
4	Connector(CN101)	CKS2272
5	Screw	BMZ20P025FMC
6	Screw	CBA1037
7	Screw	CBA1041
8	Screw	CBA1176
9	Screw	CBA1362
10	Screw	CBA1387
11	Screw	CBA1470
12	Screw	CBA1476
13	Screw	CBA1486
14	Washer	CBF1038
15	Spring	CBH1867
16	Spring	CBH2172
17	Spring	CBH2173
18	Spring	CBH2174
19	Spring	CBH2175
20	Spring	CBH2177
21	Spring	CBH2178
22	Spring	CBH2179
23	Spring	CBL1390
24	Spring	CBL1392
25	Spring	CBL1404
26	Short Pin	CBL1239
27	Volume(VR801)	CCW1024
28	•••••	
29	Shaft	CLA3304
30	Arm	CNC7901
31	Lever	CNC7905
32	Lever	CNC7906
33	Arm	CNC7908
34	Arm	CNC7909
35	Holder	CNC7911
36	Holder	CNC7912
37	Lever	CNC7919
38	Stopper	CNC7920
39	Frame	CNC7921
40	Lever	CNC7922
41	Bracket	CNC7923
42	Lever	CNC7924
43	Frame	CNC7927
44	Frame	CNC7928
45	Bracket	CNC8355
46	Plate	CNC8375
47	Cover	CNC8434
48	Sheet	CNM6009
49	Spacer	CNM6146
50	Sheet	CNM6296
51	PCB	CNP5227
52	PCB	CNP5228
53	Ball	CNR1189
54	Gear	CNR1531
55	Belt	CNT1086
56	Gear	CNV5472
57	Gear	CNV5473
58	Rail	CNV5474
59	Lever	CNV5475
60	Gear	CNV5477
61	Arm	CNV5478
62	Holder	CNV5480
63	Guide	CNV5481
64	Guide	CNV5482
65	Holder	CNV5483
66	Holder	CNV5484
67	Clamper	CNV5485
68	Gear	CNV5486
69	Gear	CNV5562
70	Holder	CNV5563
71	Stopper	CNV5564
72	Lighting Conductor	CNV5785
73	Mechanism PCB	CWX2303
74	Connector(CN801)	CKS1965
75	Connector(CN802)	CKS3486
76	Damper Unit	CXA7159
77	Chassis Unit	CXB2850
78	•••••	
79	Chassis Unit	CXB2851
80	Arm Unit	CXB2855
81	Screw Unit	CXB2857
82	•••••	
83	Frame Unit	CXB4427
84	Magazine Holder Unit	CXB2859
85	Motor Unit(M851)(SPINDLE)	CXB3003
86	Motor Unit(M854)(CARRIAGE)	CXB3004
87	Screw	JFZ20P025FMC
88	Motor Unit(M853)(TRAY)	CXB4421
89	Screw	JFZ20P025FMC
90	Motor Unit(M852)(ELV)	CXB3006

Mark	No.	Description	Part No.
	91	Screw	JFZ20P025FMC
	92	Lever Unit	CXB3938
	93	•••••	
	94	Gear Unit	CXB4338
	95	Screw	JGZ17P025FZK
	96	Pickup Unit(Service)	CXX1285
	97	•••••	
	98	•••••	
	99	Screw	IMS26P040FMC
	100	Screw	JFZ20P025FNI
	101	Photo-transistor(Q851)	PT4800
	102	Spring Switch(S851,S853)	CSN1051
	103	LED(D851)	CN504-2
	104	Spring Switch(S852)	CSN1052

(2) CONTRAST TABLE

CDX-P1250/X1N/UC, CDX-P1250/X1N/EW and CDX-P1250/X1N/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		CDX-P1250/X1N/UC	CDX-P1250/X1N/EW	CDX-P1250/X1N/ES
2	CD Core Unit(C8)	CWX2262	CWX2263	CWX2262

2.4 MAGAZINE ASSY

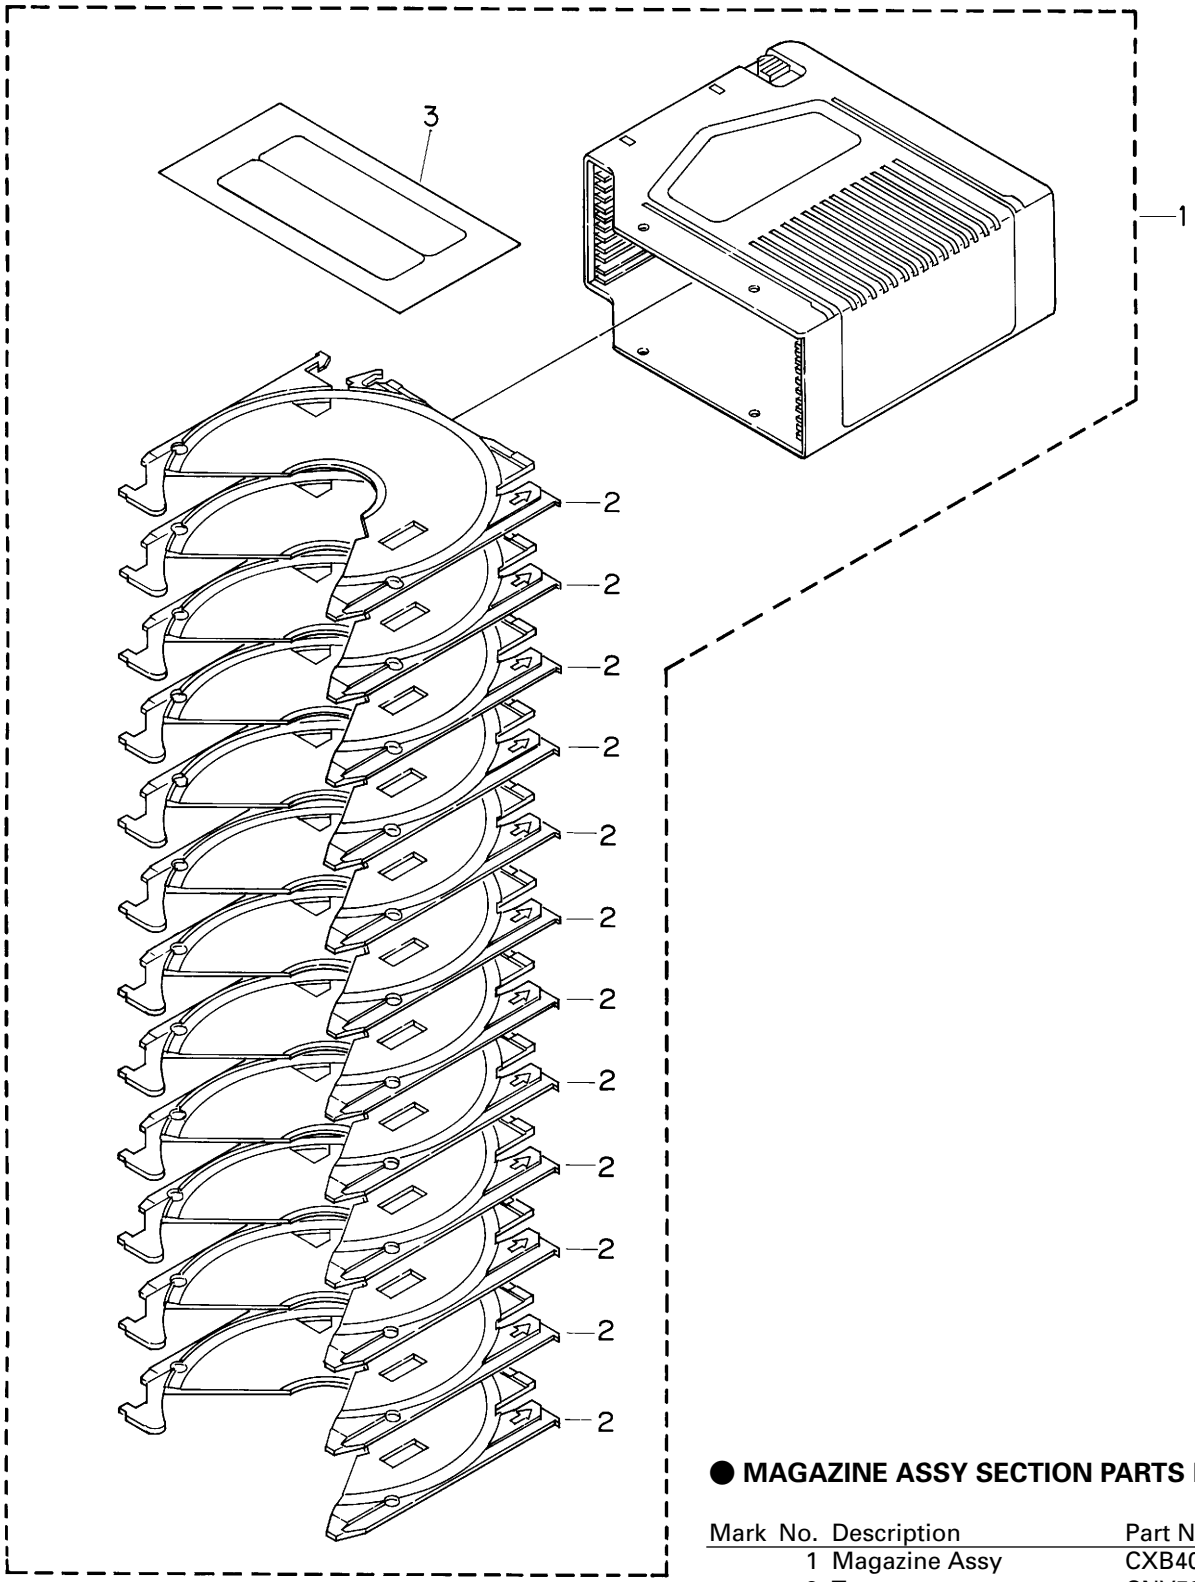

● **MAGAZINE ASSY SECTION PARTS LIST**

Mark	No.	Description	Part No.
	1	Magazine Assy	CXB4028
	2	Tray	CNV5341
	3	Label	CRW1396

3. SCHEMATIC DIAGRAM

3.1 OVERALL CONNECTION DIAGRAM

Note: When ordering service parts, be sure to refer to "EXPLODED VIEWS AND PARTS LIST" or "ELECTRICAL PARTS LIST".

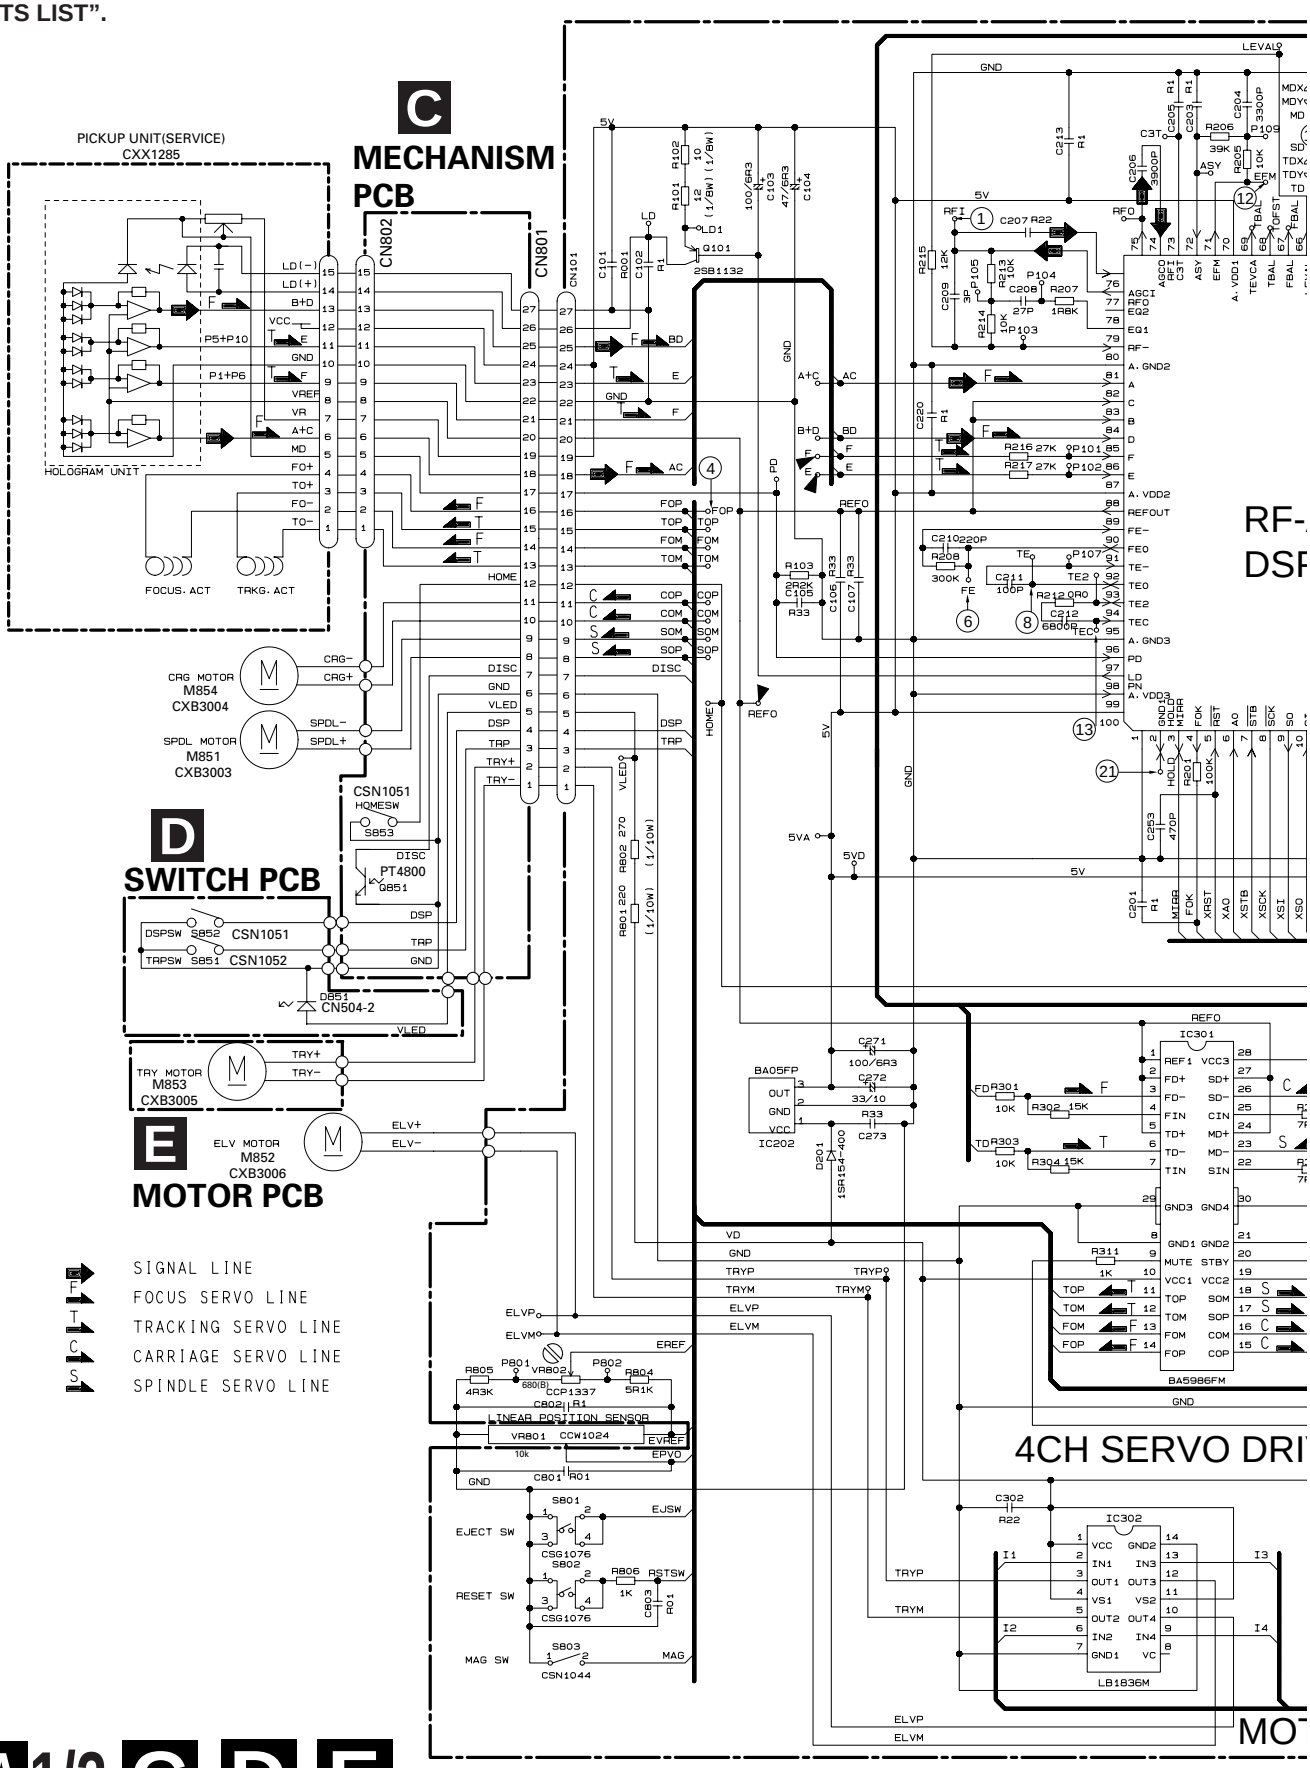

NOTE :

Symbol indicates a resistor.
No differentiation is made between chip resistors and discrete resistors.

Symbol indicates a capacitor.
No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as:
2.2→2R2
0.022→R022

A CD CORE UNIT

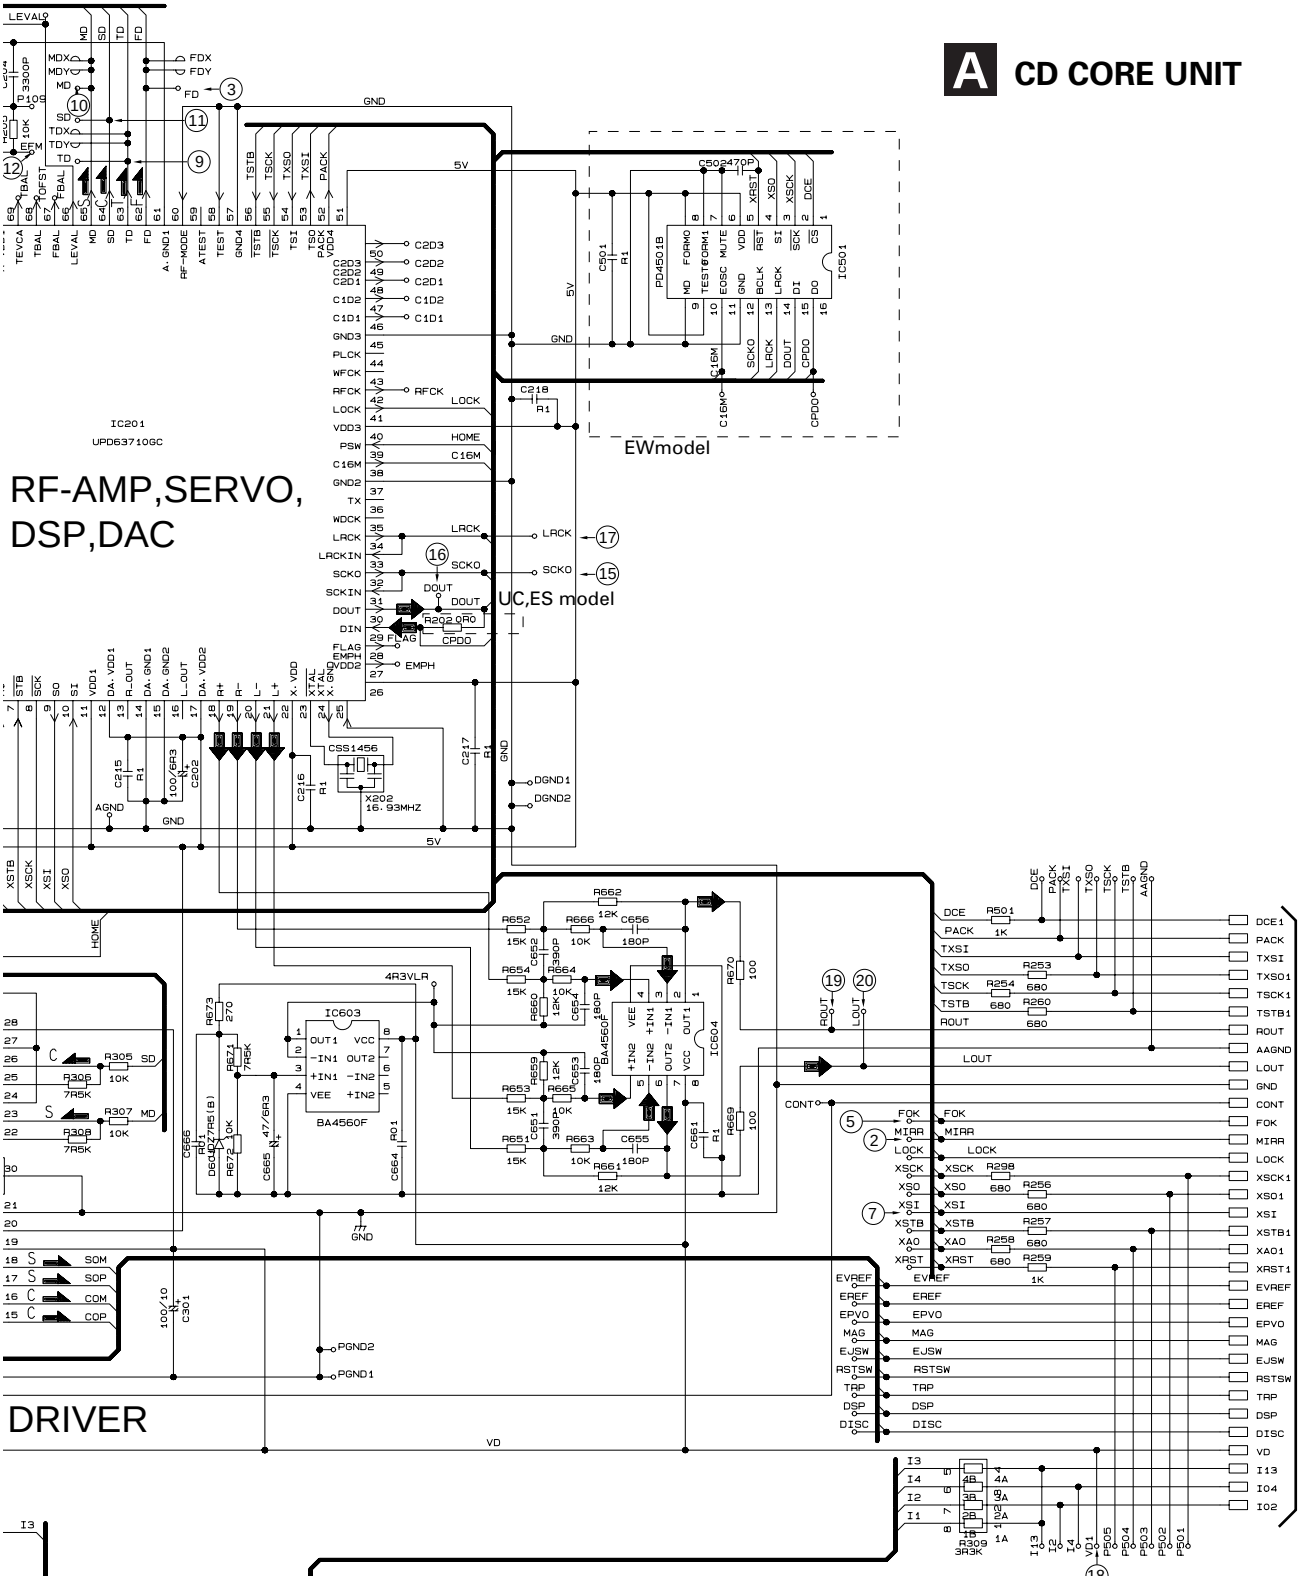

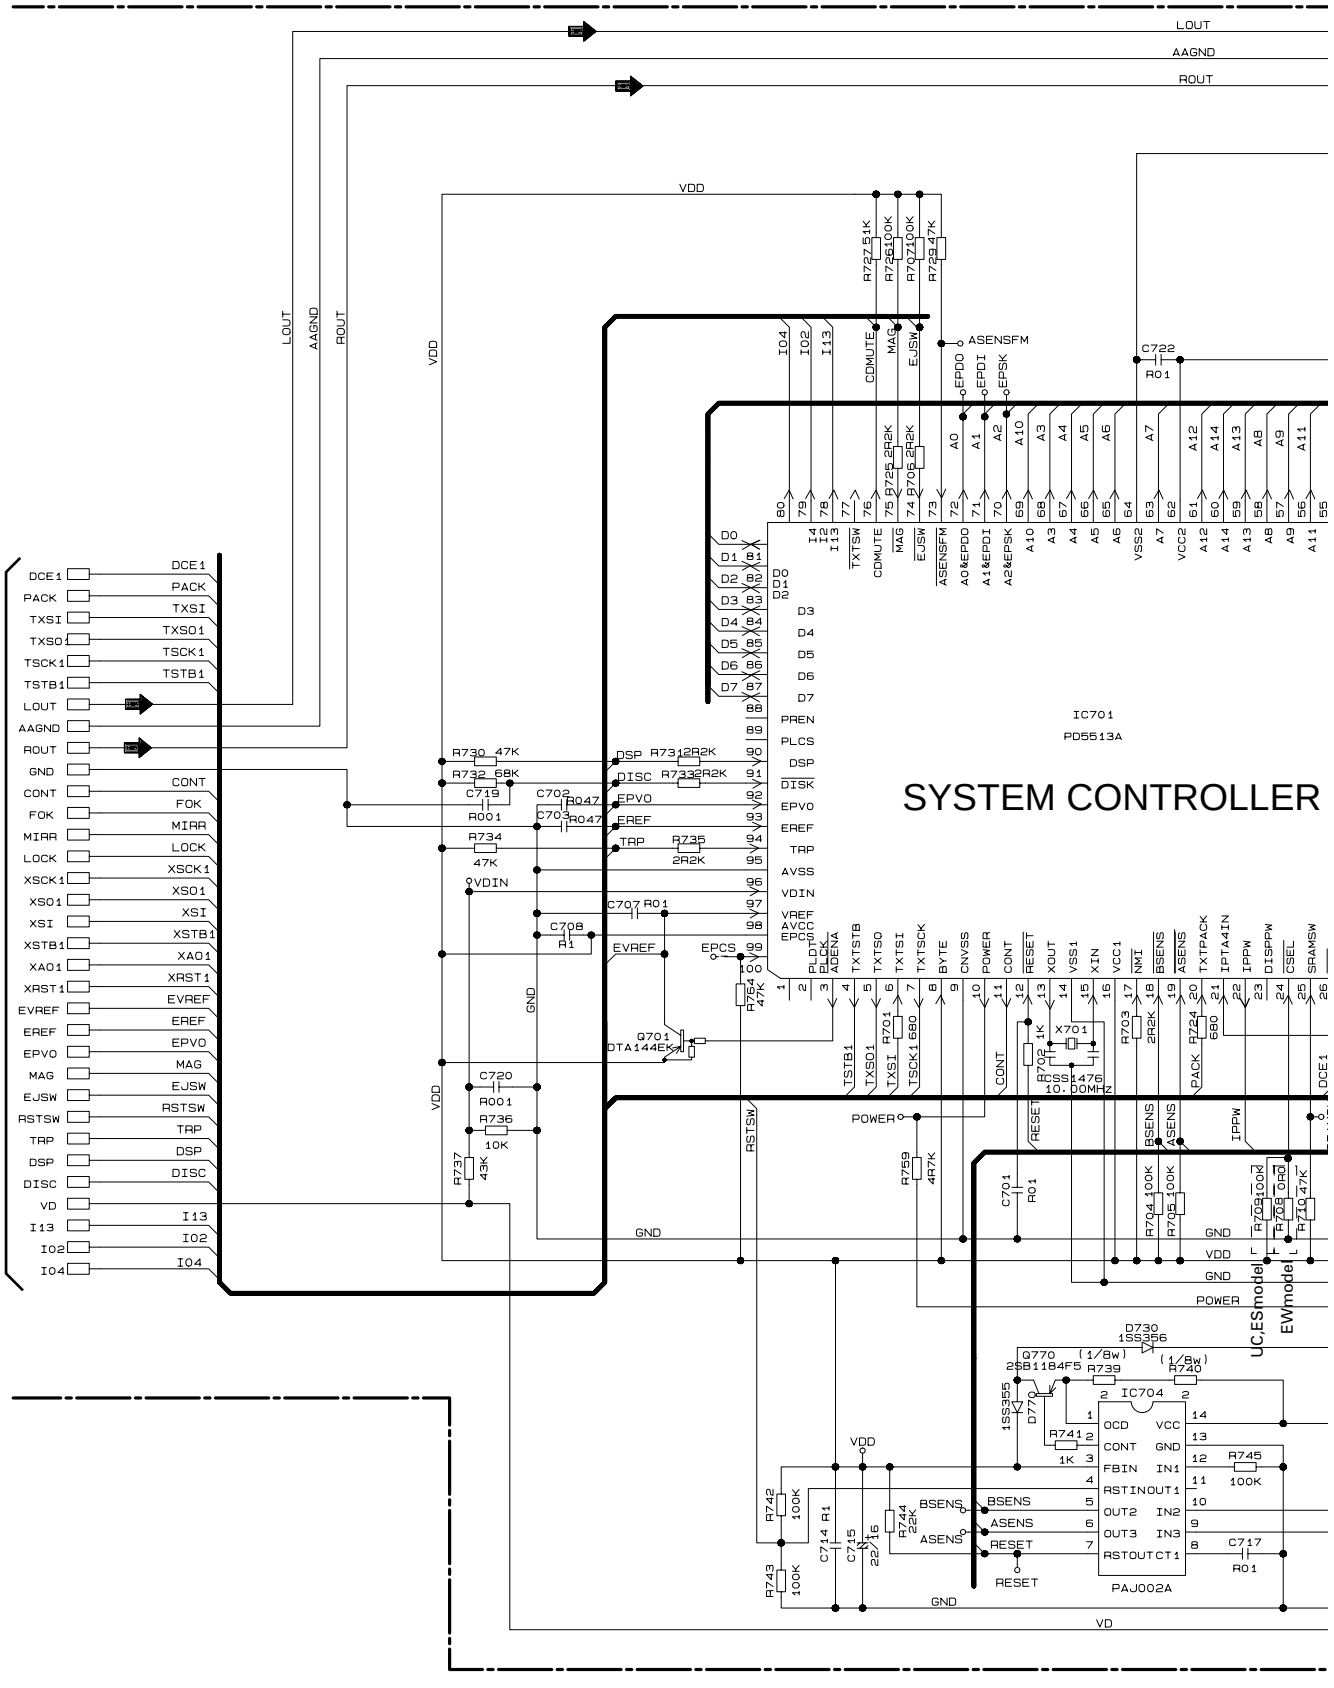
SYSTEM CONTROLLER
IC701
PD5513A
PAJ002A
A1/2
A2/2
LOUT
AAGND
ROUT
VDD
GND
VD
POWER
ASENSFM
X701
10.00MHz
Q701
DTA144EK
IC704
D730
1SS356
D771
1SS355
Q770
2SB1184F5
UC,ESmodel
EWmodel

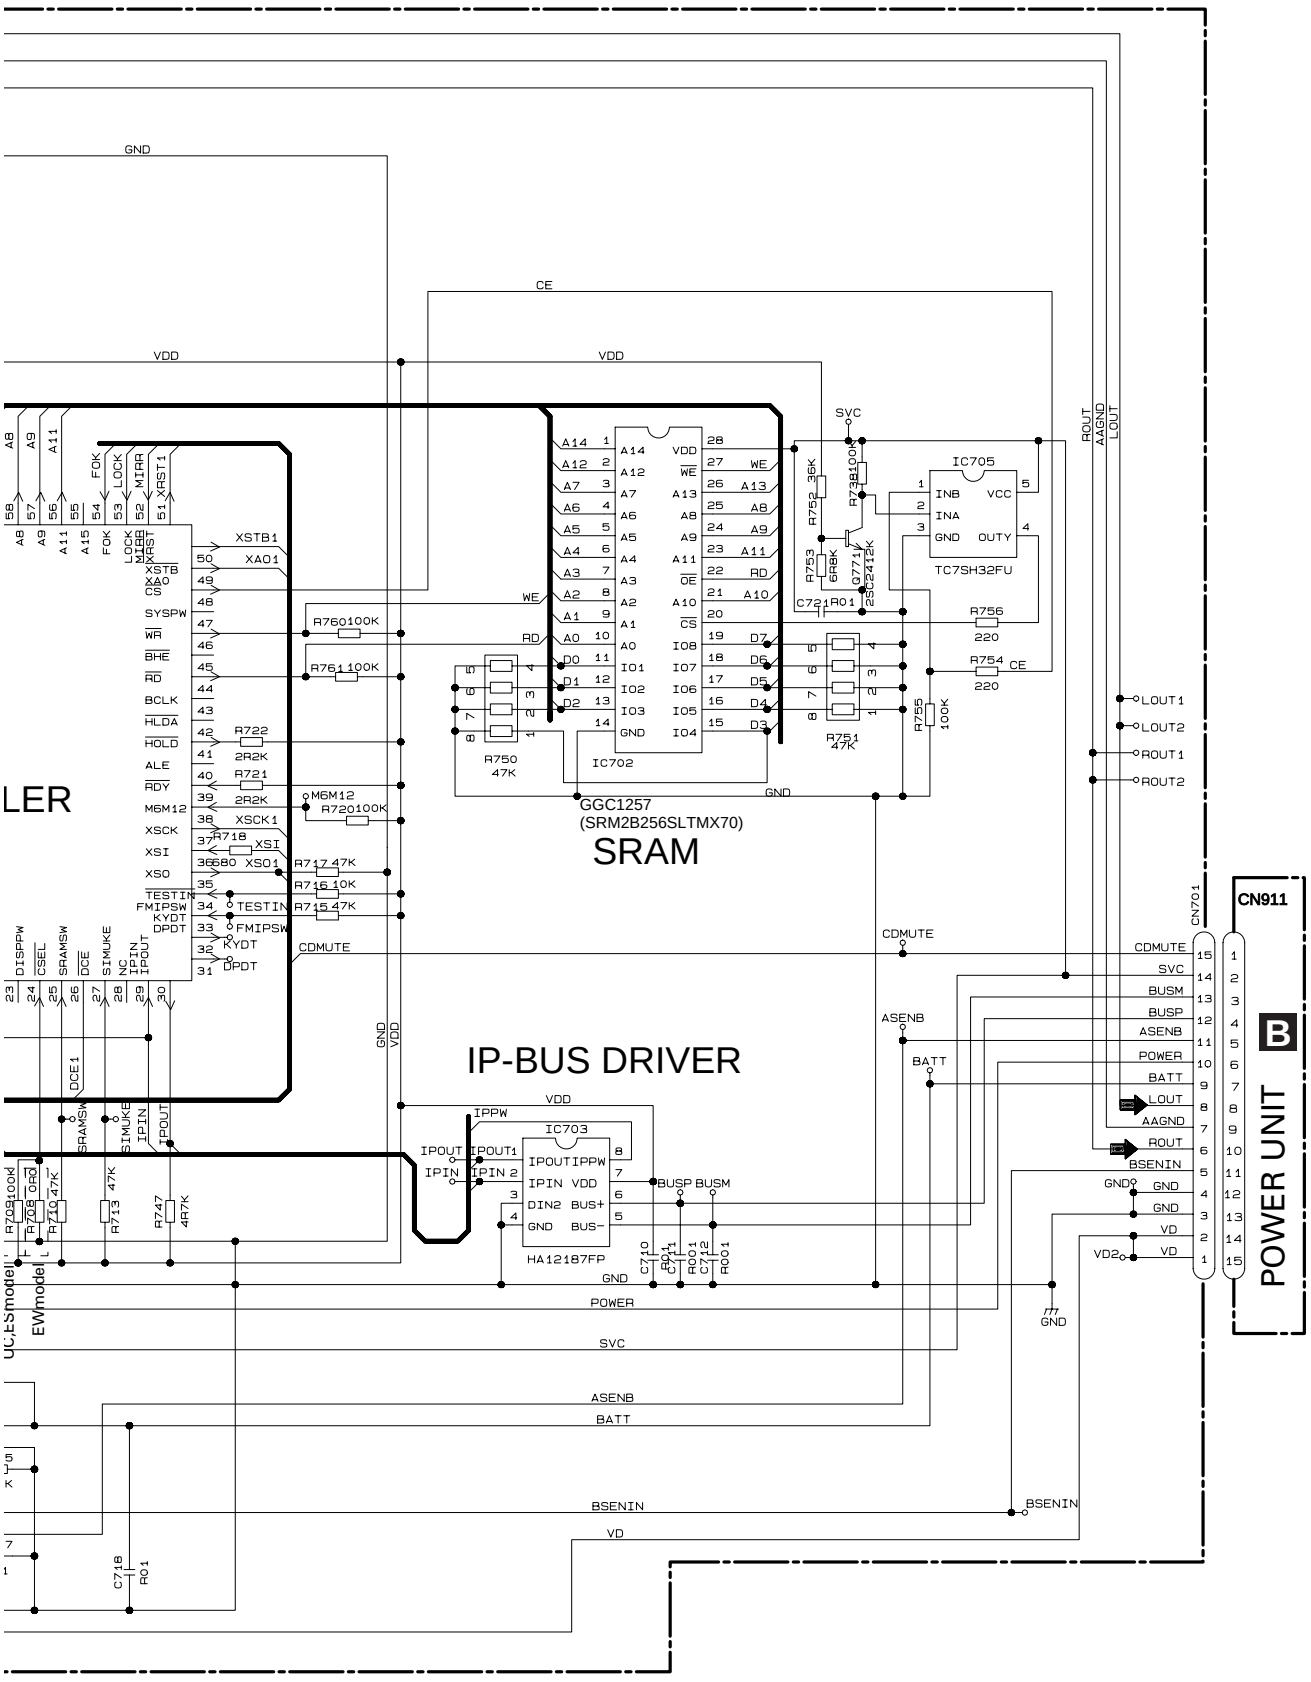
GND
CE
VDD
VDD
SVC
ROUT
AAGND
LOUT
XSTB1
XAO1
WE
RD
R760 100K
R761 100K
R722 2R2K
R721 2R2K
M6M12
R720 100K
XSCK1
XSI
XSO1
R717 47K
R716 10K
R715 47K
TESTIN
FMIPSW
KYDT
DPDT
CDMUTE
SYSPW
BCLK
HLDA
HOLD
ALE
RDY
IC702
GGC1257
(SRM2B256SLTMX70)
SRAM
R750 47K
R751 47K
R752 36K
R753 68K
R754 CE 220
R755 100K
R756 220
R738 100K
Q771
2SA1213K
C721
R01
IC705
TC7SH32FU
INB
INA
GND
VCC
OUTY
LOUT1
LOUT2
ROUT1
ROUT2
LER
IP-BUS DRIVER
IC703
HA12187FP
IPPW
IPOUT
IPIN
BUSP
BUSM
R708 100K
R709 0R0
R710 47K
R713 47K
R747 4R7K
C710
C711
R001
C712
R001
DISPPW
CSEL
SRAMSW
DCE
SIMUKE
NC
IPIN
IPOUT
DCE1
SRAMSW
SIMUKE
IPIN
IPOUT
CN701
CN911
B
POWER UNIT
CDMUTE
SVC
BUSM
BUSP
ASENB
POWER
BATT
LOUT
AAGND
ROUT
BSENIN
GND
VD
VD2
ASENB
BATT
BSENIN
VD
C718
R01

Note:1. The encircled numbers denote measuring pointes in the circuit diagram.
2. Reference voltage
REFO:2.5V

● Waveforms

① RFI 0.5V/div. 0.5µs/div.
Normal mode: play

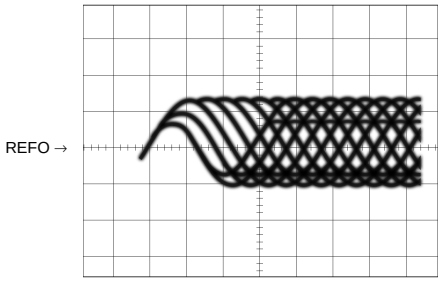

① CH1: RFI 1V/div. 0.5ms/div.
② CH2: MIRR 5V/div.
Test mode: Tracking open

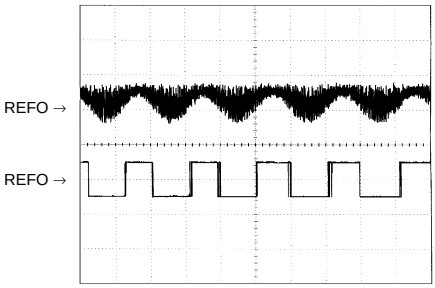

① CH1: RFI 1V/div. 0.5ms/div.
② CH2: MIRR 5V/div.
Normal mode: The defect part passes 800µm

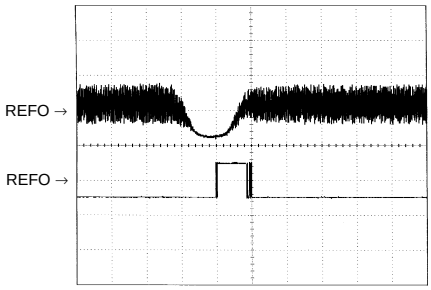

③ CH1: FD 0.5V/div. 0.2s/div.
④ CH2: FOR 2V/div.
Test mode: No disc, Focus close

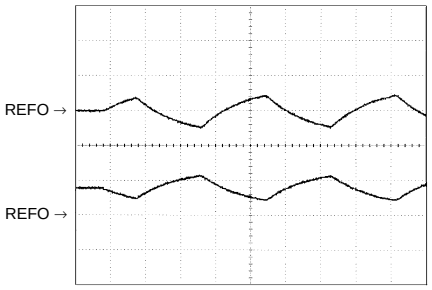

③ CH1: FD 0.5V/div. 0.2s/div.
⑤ CH2: FOK 2V/div.
Normal mode: Focus close

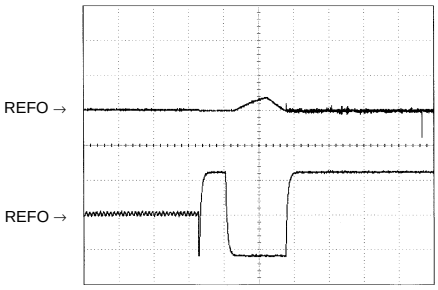

⑥ CH1: FE 0.5V/div. 1ms/div.
⑦ CH2: XSI 2V/div.
Normal mode: Focus close

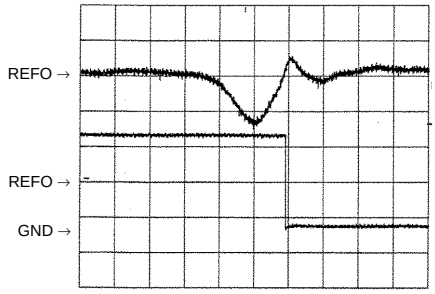

⑧ CH1: TE 0.5V/div. 0.5ms/div.
⑨ CH2: TD 0.5V/div.
Test mode: 32 tracks jump (REV)

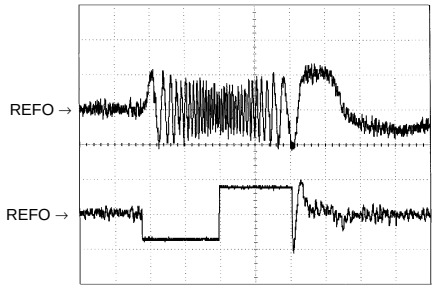

⑧ CH1: TE 0.5V/div. 0.5ms/div.
⑨ CH2: TD 0.5V/div.
Test mode: Single jump (REV)

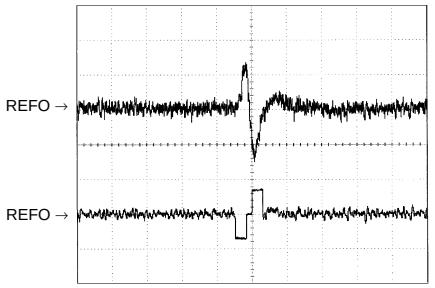

⑧ CH1: TE 0.5V/div. 5ms/div.
⑨ CH2: TD 0.5V/div.
Test mode: 100 tracks jump (REV)

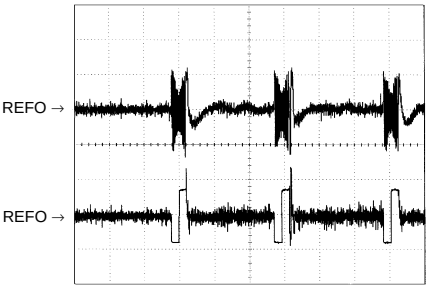

⑥ CH1: FE 0.1V/div. 20ms/div.
③ CH2: FD 0.2V/div.
Normal mode: Play

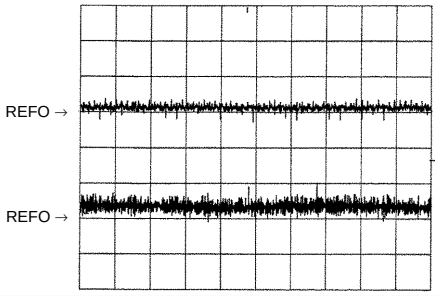

③ CH1: FD 0.5V/div. 0.5s/div.
⑩ CH2: MD 1V/div.
Normal mode: Focus close (12cm)

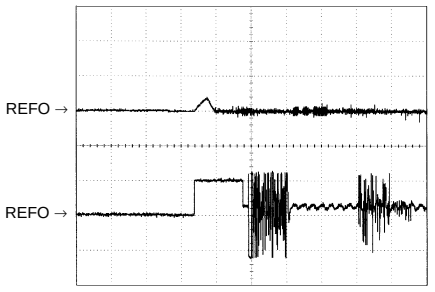

③ CH1: FD 0.5V/div. 0.5s/div.
⑩ CH2: MD 1V/div.
Normal mode: Focus close (8cm)

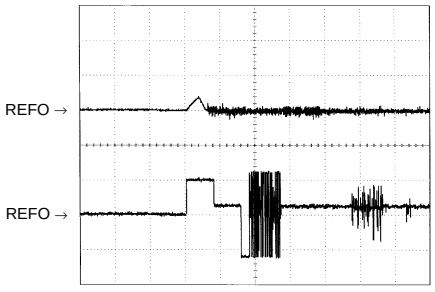

⑧ CH1: TE 0.2V/div. 20ms/div.
⑨ CH2: TD 0.2V/div.
Normal mode: play

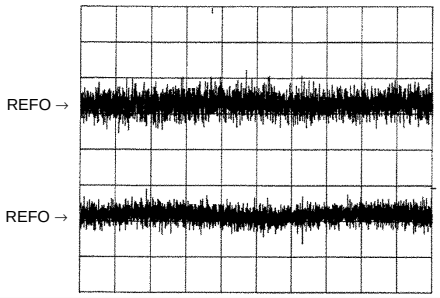

⑧ CH1: TE 0.5V/div. 5ms/div.
⑪ CH2: SD 0.5V/div.
TEST mode:100Tracks jump(FWD)

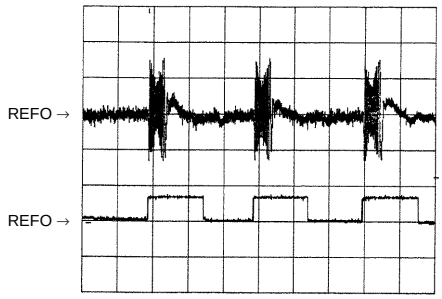

⑩ MD 0.5V/div. 0.1s/div.
Normal mode: Play (12cm)

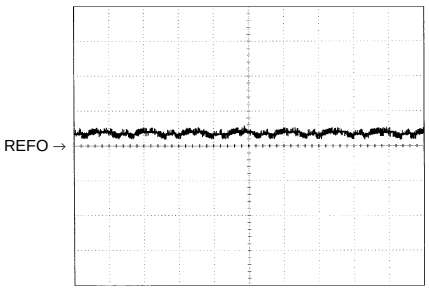

⑩ MD 1V/div. 10ms/div.
Long Search (12cm)

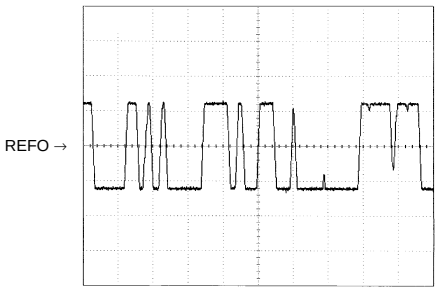

⑫ EFM 1V/div. 5µs/div.
Normal mode: Play

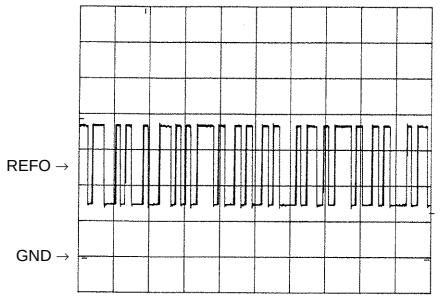

⑧ CH1: TE 1V/div. 2ms/div.
⑬ CH2: TEC 1V/div.
Test mode: Focus close
Tracking open

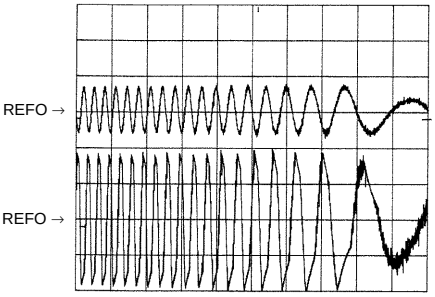

⑧ CH1: TE 0.5V/div. 0.2s/div.
⑥ CH2: FE 0.5V/div.
Normal mode: AGC after focus close

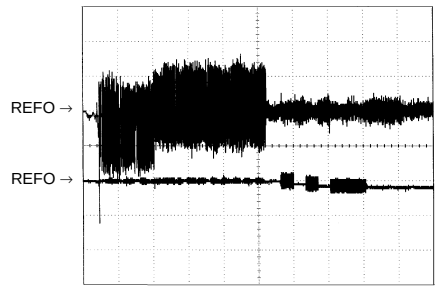

⑮ SCKO 2V/div. 1µs/div.
Normal mode: Play

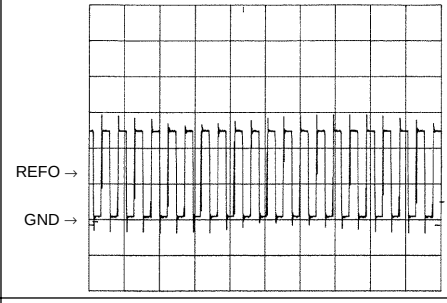

⑯ DOUT 2V/div. 10µs/div.
Normal mode: Play

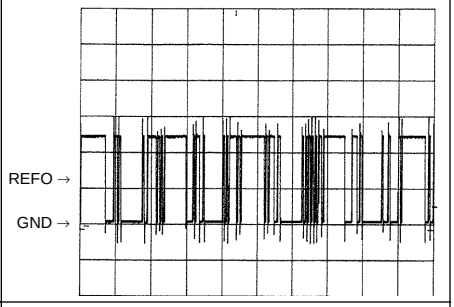

⑰ LRCK 2V/div. 20µs/div.
Normal mode: Play

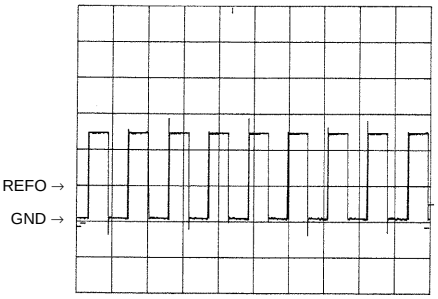

⑱ VD 5V/div. 50ms/div.
Normal mode: No disc

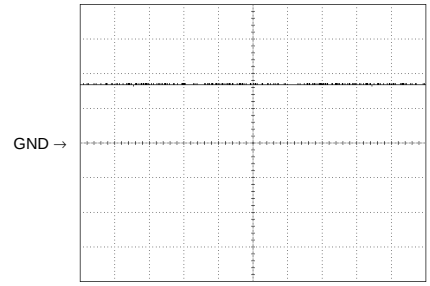

⑲ CH1: R OUT 2V/div.
⑳ CH2: L OUT 2V/div.
500µs/div.
Normal mode: Play (1kHz 0dB)

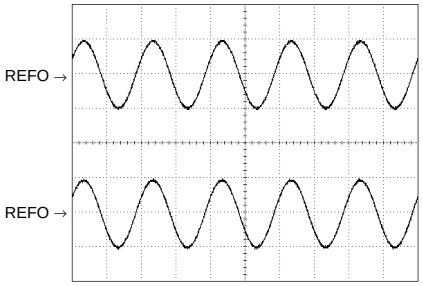

⑥ CH1: FE 0.2V/div.
③ CH2: FD 0.5V/div.
1ms/div.
Normal mode: During AGC

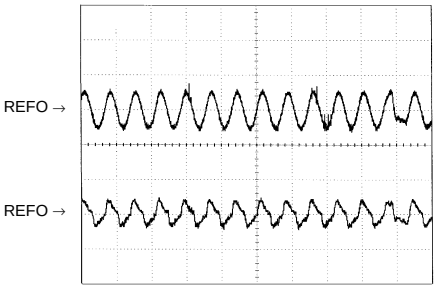

⑧ CH1: TE 0.2V/div.
⑨ CH2: TD 0.5V/div.
1ms/div.
Normal mode: During AGC

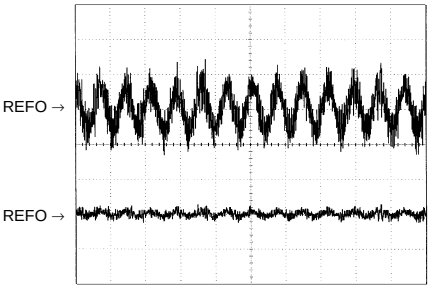

① CH1: RFI 1V/div.
㉑ CH2: HOLD 5V/div.
0.5ms/div.
Normal mode: The defect part passes 800µm(B.D)

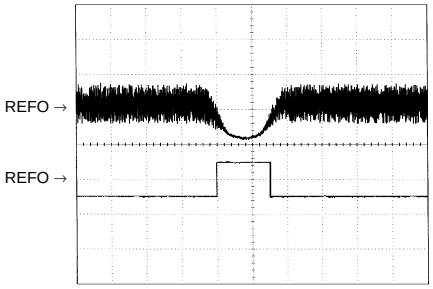

③ CH1: FD 1V/div.
㉑ CH2: HOLD 5V/div.
0.5ms/div.
Normal mode: The defect part passes 800µm(B.D)

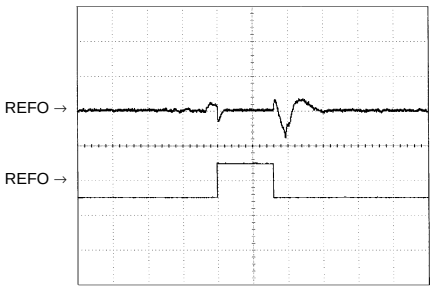

⑨ CH1: TD 0.1V/div.
㉑ CH2: HOLD 5V/div.
0.5ms/div.
Normal mode: The defect part passes 800µm(B.D)

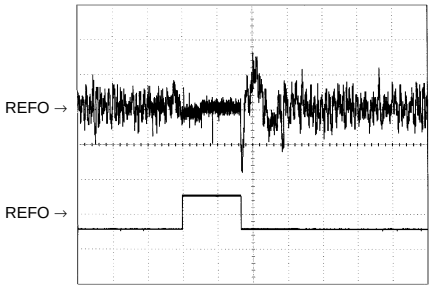

3.2 POWER UNIT

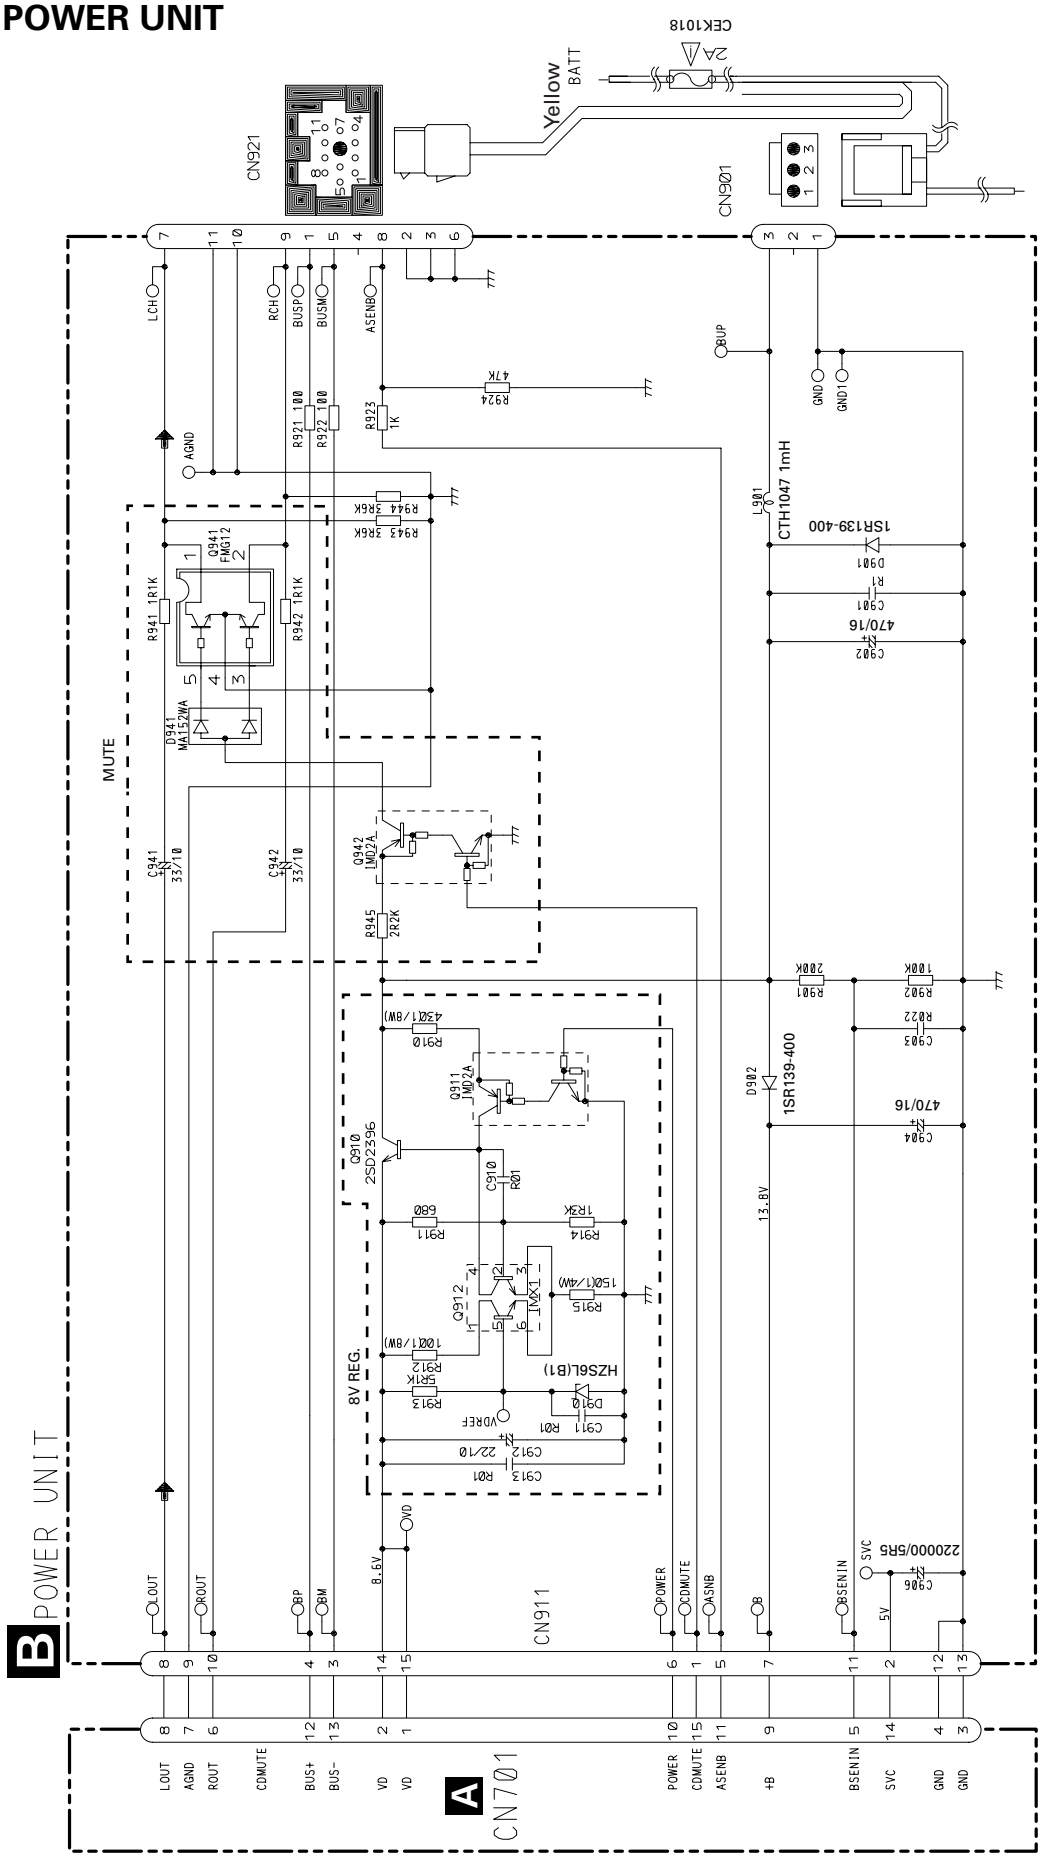

4. PCB CONNECTION DIAGRAM

4.1 CD CORE UNIT

NOTE FOR PCB DIAGRAMS

1. The parts mounted on this PCB include all necessary parts for several destination.
   For further information for respective destinations, be sure to check with the schematic diagram.

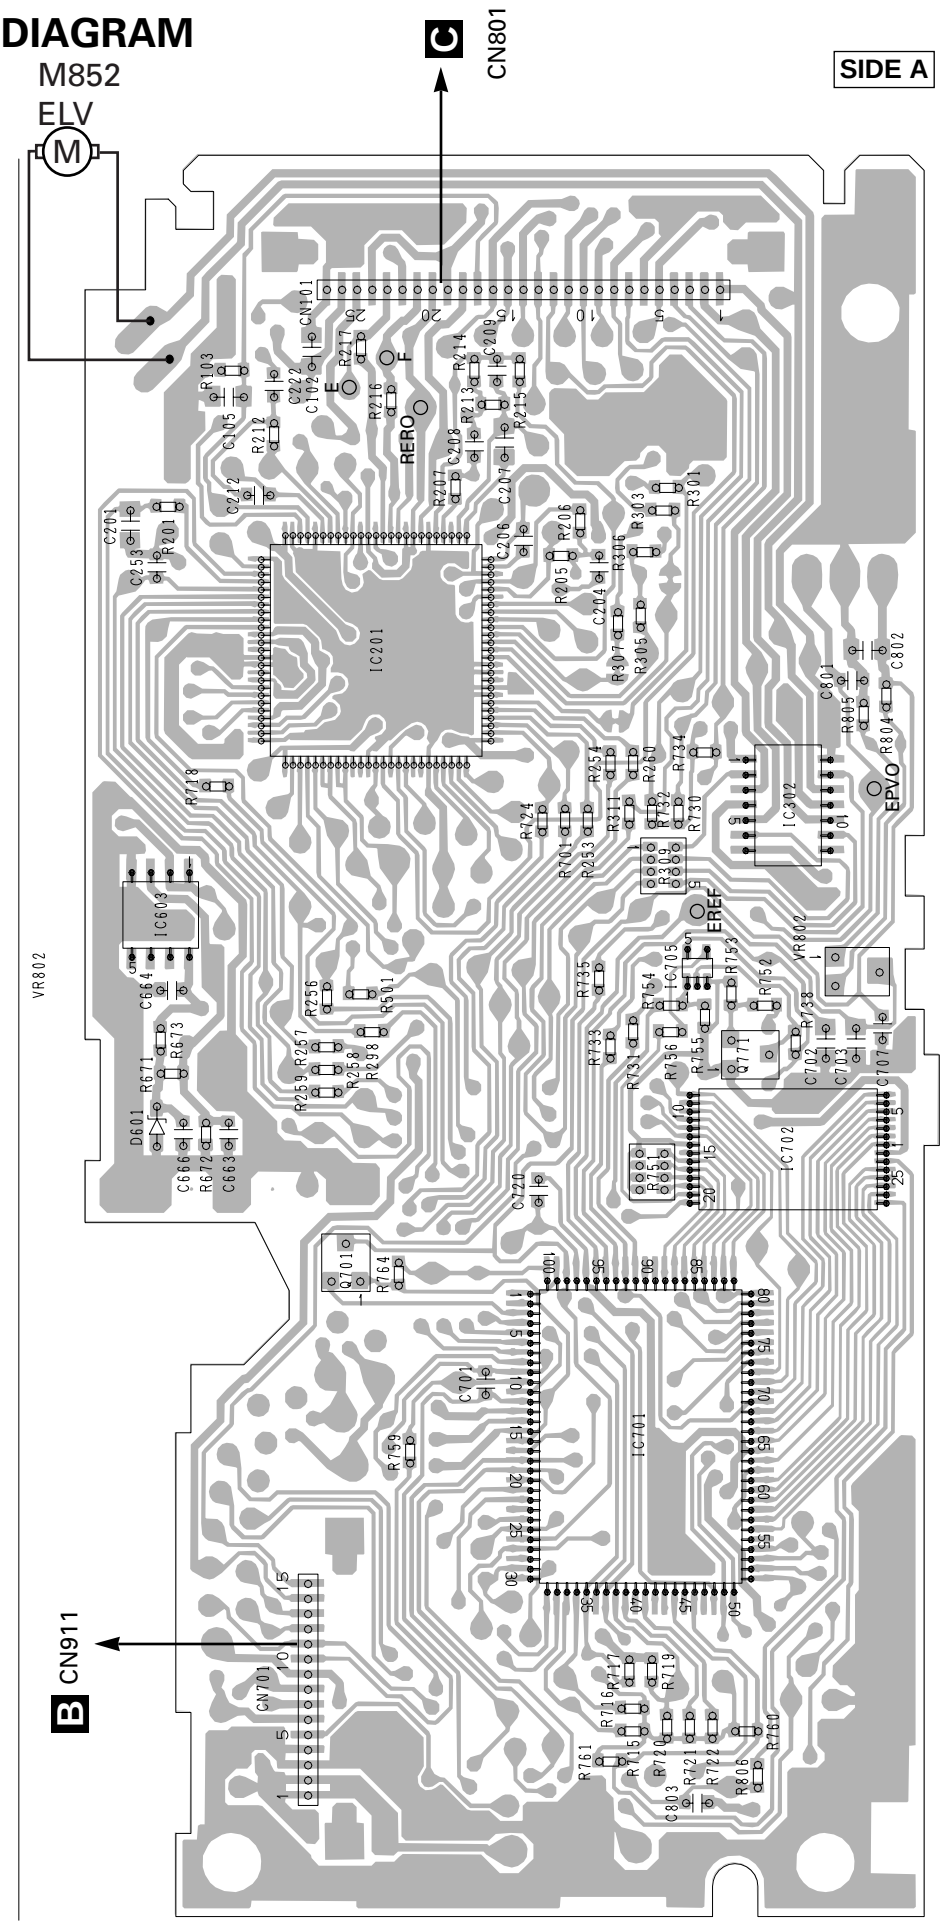

2. Viewpoint of PCB diagrams

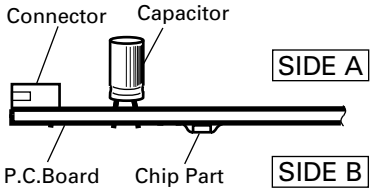

SIDE B

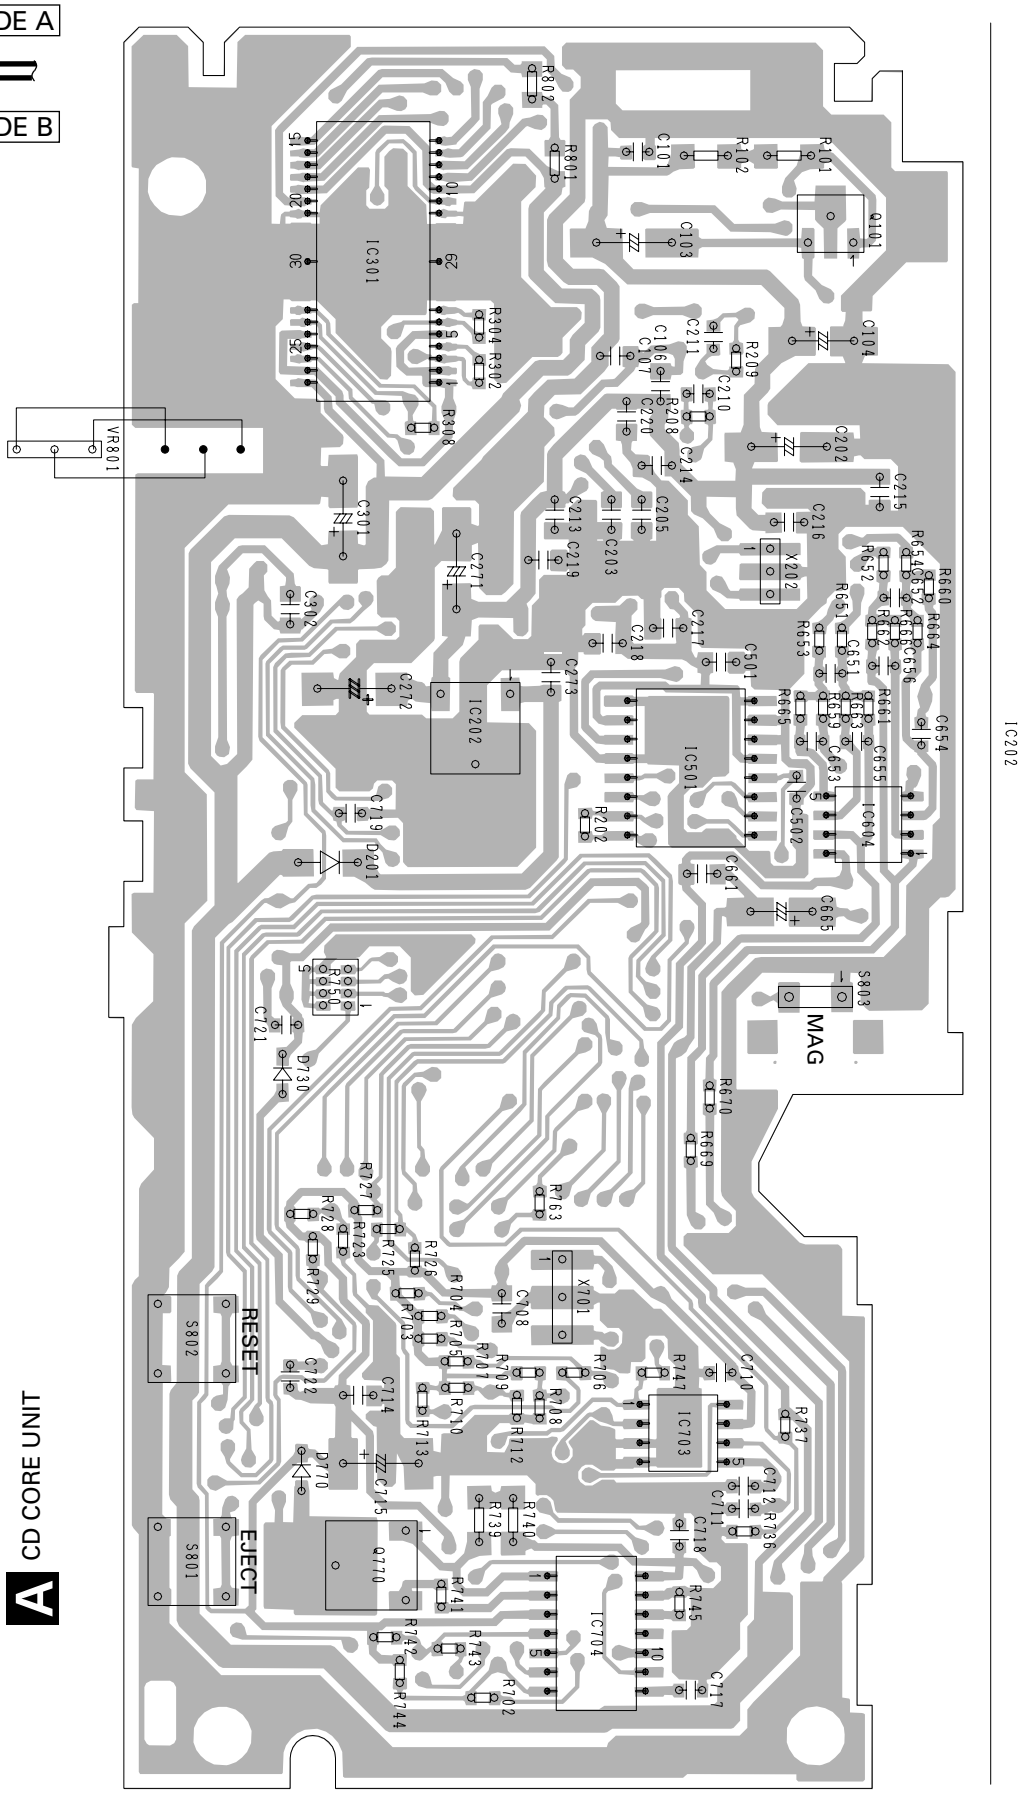

4.2 POWER UNIT

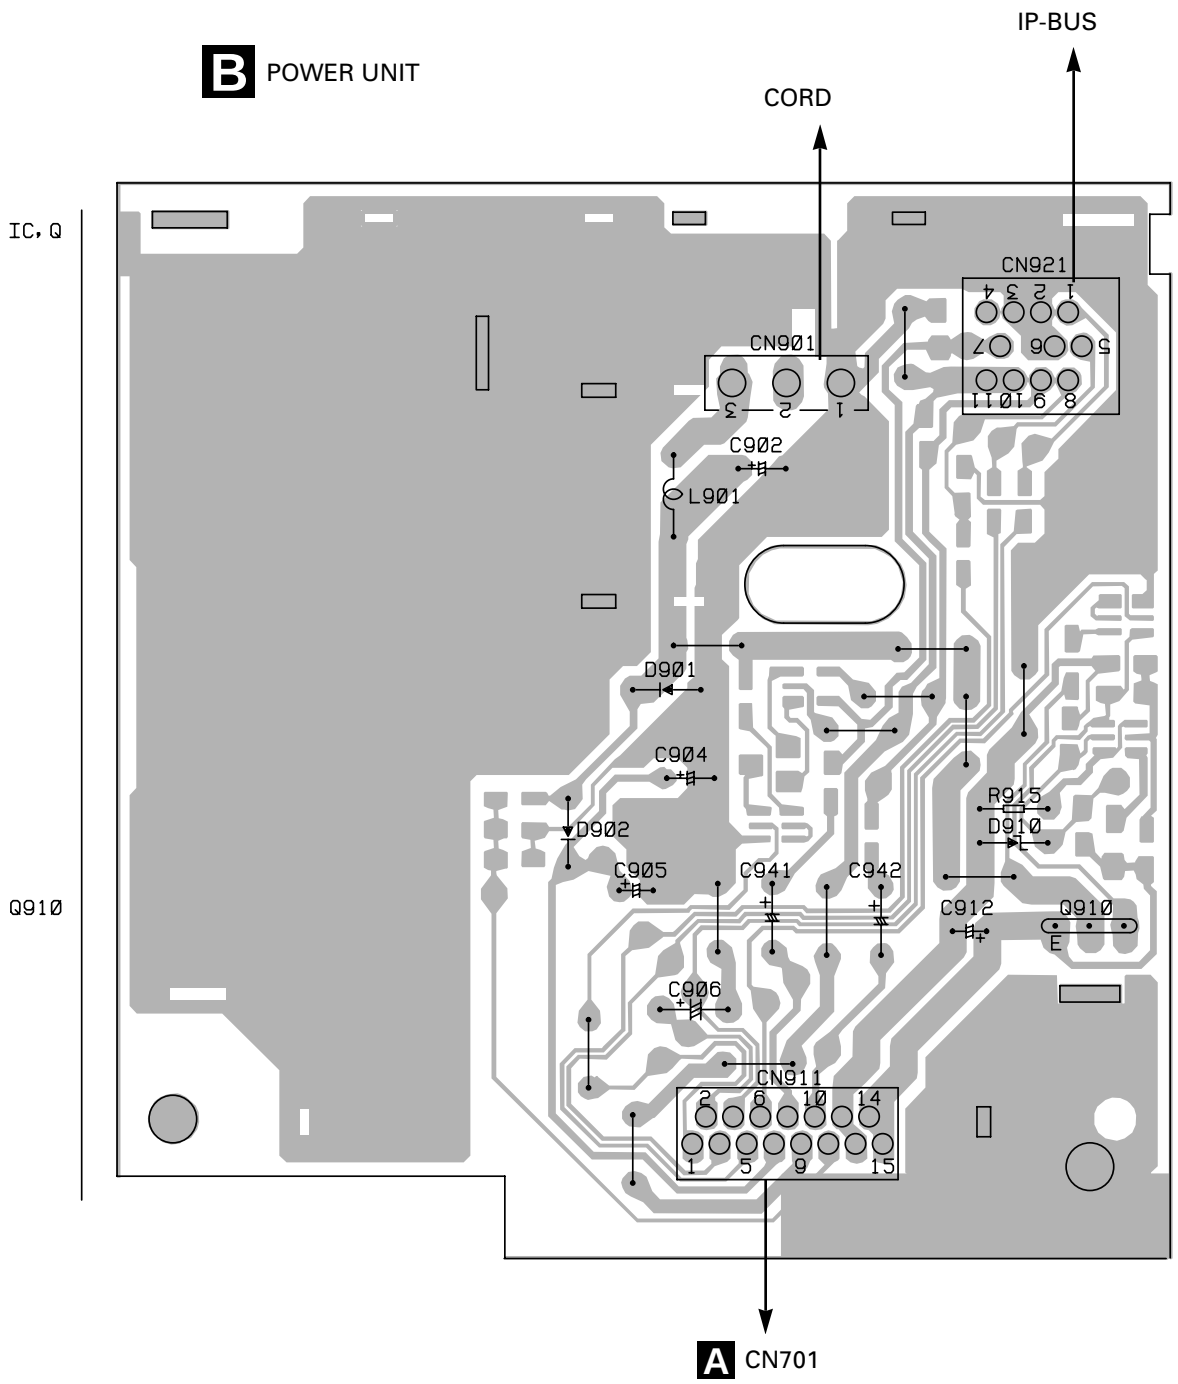

SIDE B

B POWER UNIT

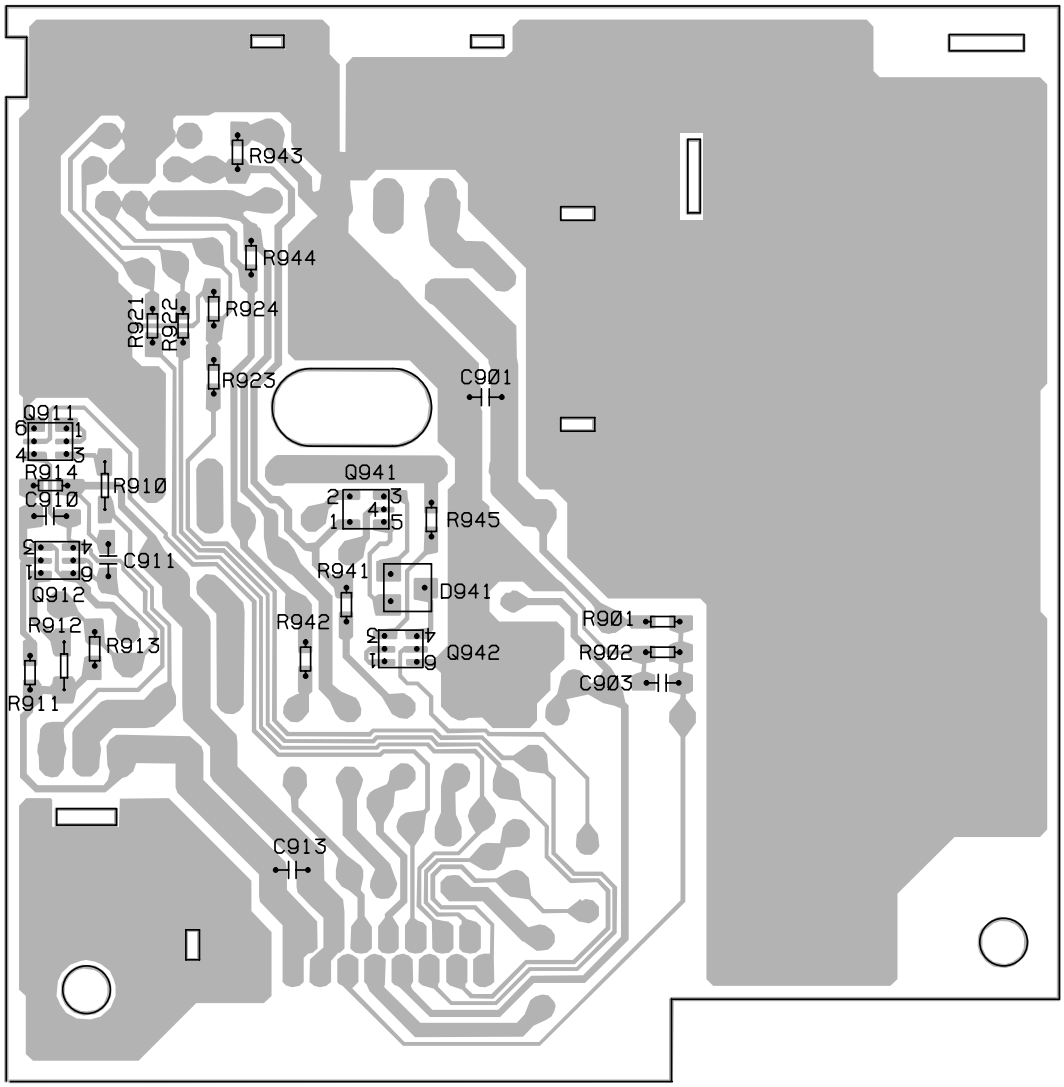

4.3 MECHANISM PCB

C MECHANISM PCB

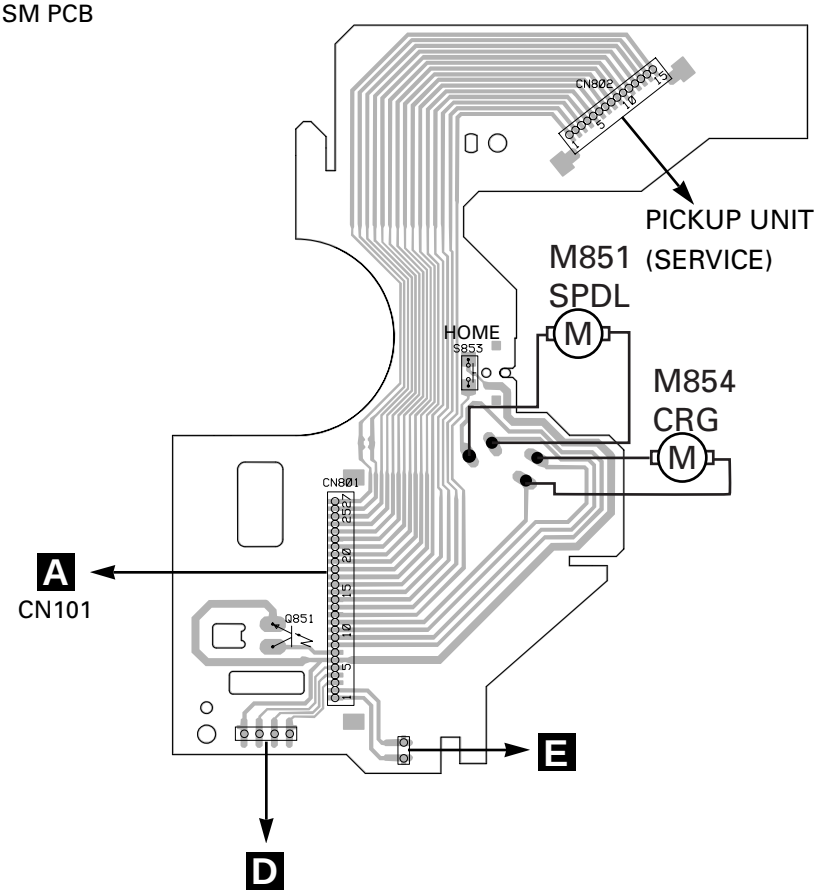

4.4 SWITCH PCB

D SWITCH PCB

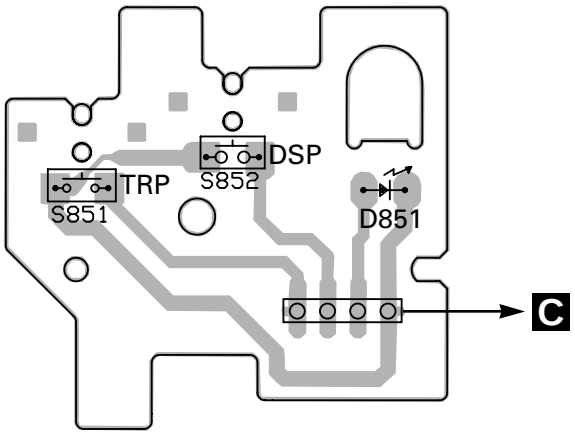

4.5 MOTOR PCB

E MOTOR PCB

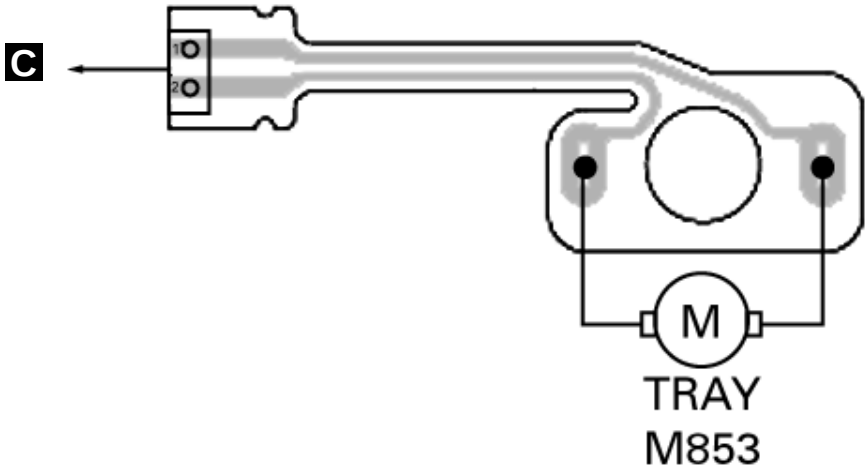

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWX2262(CDX-P1250/X1N/UC,ES)
CWX2263(CDX-P1250/X1N/EW)
Unit Name : CD Core Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	201	IC	UPD63710GC
IC	202	IC	BA05FP
IC	301	IC	BA5986FM
IC	302	IC	LB1836M
IC	501	IC(EW model)	PD4501B
IC	603	IC	BA4560F
IC	604	IC	BA4560F
IC	701	IC	PD5513A
IC	702	IC (SRM2B256SLTMX70)	GGC1257
IC	703	IC	HA12187FP
IC	704	IC	PAJ002A
IC	705	IC	TC7SH32FU
Q	101	Transistor	2SB1132
Q	701	Transistor	DTA144EK
Q	770	Transistor	2SB1184F5
Q	771	Transistor	2SC2412K
D	201	Diode	1SR154-400
D	601	Diode	UDZ7R5(B)
D	730	Diode	1SS356
D	770	Diode	1SS355
X	202	Ceramic Resonator 16.93MHz	CSS1456
X	701	Ceramic Resonator 10.00MHz	CSS1476
S	801	Push Switch(EJECT)	CSG1076
S	802	Push Switch(RESET)	CSG1076
S	803	Spring Switch(MAG)	CSN1044
VR	802	Semi-fixed 680Ω(B)	CCP1337

RESISTORS

R	101		RS1/8S120J
R	102		RS1/8S100J
R	103		RS1/16S222J
R	201		RS1/16S104J
R	202	(UC,ES model)	RS1/16S0R0J
R	205		RS1/16S103J
R	206		RS1/16S393J
R	207		RS1/16S182J
R	208		RS1/16S304J
R	212		RS1/16S0R0J
R	213		RS1/16S103J
R	214		RS1/16S103J
R	215		RS1/16S123J
R	216		RS1/16S273J
R	217		RS1/16S273J
R	253		RS1/16S681J
R	254		RS1/16S681J
R	256		RS1/16S681J
R	257		RS1/16S681J
R	258		RS1/16S681J
R	259		RS1/16S102J
R	260		RS1/16S681J
R	298		RS1/16S681J
R	301		RS1/16S103J
R	302		RS1/16S153J
R	303		RS1/16S103J
R	304		RS1/16S153J
R	305		RS1/16S103J
R	306		RS1/16S752J
R	307		RS1/16S103J
R	308		RS1/16S752J
R	309		RA4C332J
R	311		RS1/16S102J
R	501		RS1/16S102J
R	651		RSK1/16S153J
R	652		RSK1/16S153J
R	653		RSK1/16S153J
R	654		RSK1/16S153J
R	659		RSK1/16S123J
R	660		RSK1/16S123J
R	661		RSK1/16S123J
R	662		RSK1/16S123J
R	663		RSK1/16S103J
R	664		RSK1/16S103J
R	665		RSK1/16S103J
R	666		RSK1/16S103J
R	669		RS1/16S101J
R	670		RS1/16S101J
R	671		RS1/16S752J
R	672		RS1/16S103J
R	673		RS1/16S271J
R	701		RS1/16S681J
R	702		RS1/16S102J
R	703		RS1/16S222J
R	704		RS1/16S104J
R	705		RS1/16S104J
R	706		RS1/16S222J
R	707		RS1/16S104J
R	70	(EW model)	RS1/16S0R0J
R	709	(UC,ES model)	RS1/16S104J
R	710		RS1/16S473J
R	713		RS1/16S473J
R	715		RS1/16S473J
R	716		RS1/16S103J
R	717		RS1/16S473J
R	718		RS1/16S681J
R	720		RS1/16S104J
R	721		RS1/16S222J
R	722		RS1/16S222J
R	724		RS1/16S681J
R	725		RS1/16S222J
R	726		RS1/16S104J
R	727		RS1/16S513J
R	729		RS1/16S473J
R	730		RS1/16S473J

=====Circuit Symbol and No.		===Part Name	Part No.
R	731		RS1/16S222J
R	732		RS1/16S683J
R	733		RS1/16S222J
R	734		RS1/16S473J
R	735		RS1/16S222J
R	736		RS1/16S103J
R	737		RS1/16S433J
R	738		RS1/16S104J
R	739		RS1/8S2R0J
R	740		RS1/8S2R0J
R	741		RS1/16S102J
R	742		RS1/16S104J
R	743		RS1/16S104J
R	744		RS1/16S223J
R	745		RS1/16S104J
R	747		RS1/16S472J
R	750		RA4C473J
R	751		RA4C473J
R	752		RN1/16SE3602D
R	753		RN1/16SE6801D
R	754		RS1/16S221J
R	755		RS1/16S104J
R	756		RS1/16S221J
R	759		RS1/16S472J
R	760		RS1/16S104J
R	761		RS1/16S104J
R	764		RS1/16S473J
R	801		RS1/10S221J
R	802		RS1/10S271J
R	804		RS1/16S512J
R	805		RS1/16S432J
R	806		RS1/16S102J

CAPACITORS

C	101		CKSRYB102K50
C	102		CKSQYB104K25
C	103		CEV101M6R3
C	104		CEV470M6R3
C	105		CKSQYB334K16
C	106		CKSQYB334K16
C	107		CKSQYB334K16
C	201		CKSQYB104K25
C	202		CEV101M6R3
C	203		CKSQYB104K25
C	204		CKSRYB332K50
C	205		CKSQYB104K25
C	206		CKSRYB392K50
C	207		CKSQYB224K16
C	208		CCSRCH270J50
C	209		CCSRCJ3R0C50
C	210		CCSRCH221J50
C	211		CCSRCH101J50
C	212		CKSRYB682K50
C	213		CKSQYB104K25
C	215		CKSQYB104K25
C	216		CKSQYB104K25
C	217		CKSQYB104K25
C	218		CKSQYB104K25
C	220		CKSQYB104K25
C	253		CKSRYB471K50
C	271		CEV101M6R3
C	272	33µF/10V	CCH1300
C	273		CKSQYB334K16
C	301		CEV101M10

=====Circuit Symbol and No.		===Part Name	Part No.
C	302		CKSQYB224K16
C	501	(EW model)	CKSQYB104K25
C	502	(EW model)	CKSRYB471K50
C	651		CCSRCH391J50
C	652		CCSRCH391J50
C	653		CCSRCH181J50
C	654		CCSRCH181J50
C	655		CCSRCH181J50
C	656		CCSRCH181J50
C	661		CKSQYB104K25
C	664		CKSRYB103K25
C	665		CEV470M6R3
C	666		CKSRYB103K25
C	701		CKSRYB103K25
C	702		CKSQYB473K16
C	703		CKSQYB473K16
C	707		CKSRYB103K25
C	708		CKSQYB104K25
C	710		CKSRYB103K25
C	711		CKSRYB102K50
C	712		CKSRYB102K50
C	714		CKSQYB104K25
C	715		CSZST220M16
C	717		CKSRYB103K25
C	718		CKSRYB103K25
C	719		CKSRYB102K50
C	720		CKSRYB102K50
C	721		CKSRYB103K25
C	722		CKSRYB103K25
C	801		CKSRYB103K25
C	802		CKSQYB104K25
C	803		CKSRYB103K25

B Unit Number : CWX2300
Unit Name : Power Unit

MISCELLANEOUS

Q	910	Transistor	2SD2396
Q	911	Transistor	IMD2A
Q	912	Transistor	IMX1
Q	941	Transistor	FMG12
Q	942	Transistor	IMD2A
D	901	Diode	1SR139-400
D	902	Diode	1SR139-400
D	910	Diode	HZS6L(B1)
D	941	Diode	MA152WA
L	901	Choke Coil 1mH	CTH1047

RESISTORS

R	901	RS1/10S204J
R	902	RS1/10S104J
R	910	RS1/8S431J
R	911	RS1/10S681J
R	912	RS1/8S101J
R	913	RS1/10S512J
R	914	RS1/10S132J
R	915	RD1/4PU151J
R	921	RS1/10S101J
R	922	RS1/10S101J
R	923	RS1/10S102J
R	924	RS1/10S473J
R	941	RS1/10S112J
R	942	RS1/10S112J
R	943	RS1/10S362J

=====Circuit Symbol and No.		===Part Name	Part No.
R	944		RS1/10S362J
R	945		RS1/10S222J
CAPACITORS			
C	901		CKSQYB104K50
C	902	470µF/16V	CCH1183
C	903		CKSQYB223K25
C	904	470µF/16V	CCH1183
C	906	0.22F/5.5V	CCL1037
C	910		CKSQYB103K50
C	911		CKSQYB103K50
C	912		CEJA220M10
C	913		CKSQYB103K50
C	941		CEJA330M10
C	942		CEJA330M10
C	Unit Number :		
	Unit Name :	Mechanism PCB	
Q	851	Photo-transistor	PT4800
S	853	Spring Switch(HOME)	CSN1051
D	Unit Number :		
	Unit Name :	Switch PCB	
D	851	LED	CN504-2
S	851	Spring Switch(DSP)	CSN1051
S	852	Spring Switch(TAP)	CSN1052
E	Unit Number :		
	Unit Name :	Motor PCB	
M	853	Motor(TRAY)	CXB3005
Miscellaneous Parts List			
		Pickup Unit(P8)(Service)	CXX1285
M	851	Motor(SPINDLE)	CXB3003
M	852	Motor(ELV)	CXB3006
M	854	Motor(CARRIAGE)	CXB3004
VR	801	Volume 10k	CCW1024

6. ADJUSTMENT

6.1 CHECKING THE GRATING

● Checking the Grating After Changing the Pickup Unit

• **Note :**
CD mechanism modules the grating angle of the pickup unit cannot be adjusted after the pickup unit is changed. The pickup unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted pickup unit for the CD mechanism module. Changing the pickup unit is thus best considered as a last resort. However, if the pickup unit must be changed, the grating should be checked using the procedure below.

• **Purpose :**
To check that the grating is within an acceptable range.

• **Symptoms of Mal-adjustment :**
If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or track searching taking a long time, may appear.

• **Method :**

• Measuring Equipment	• Oscilloscope, Two L.P.F.
• Measuring Points	• E, F, REFO
• Disc	• ABEX TCD-784
• Mode	• TEST MODE

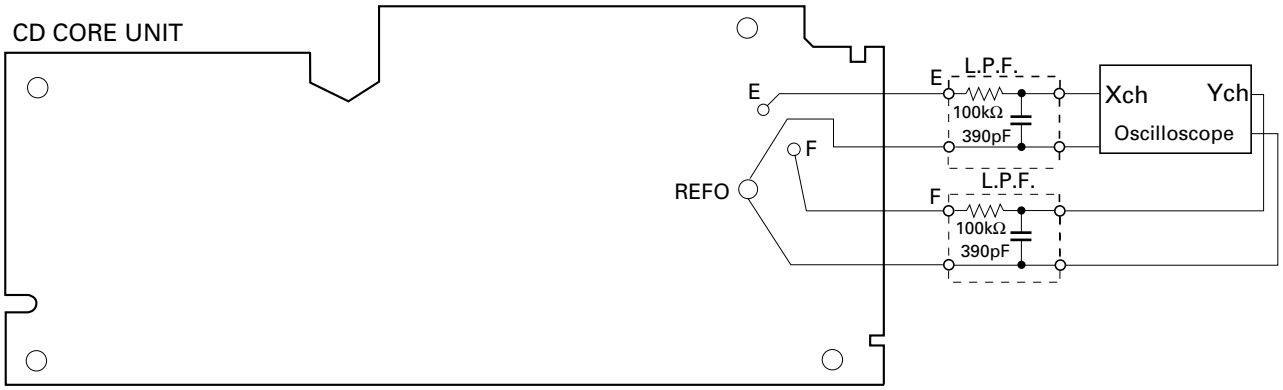

• **Checking Procedure**
1. Enter Test mode, then select Multi-CD player and switch the 5V regulator on.
2. Using the **TRK+** and **TRK-** buttons, move the pickup unit to the innermost track.
3. Press key **9** to close focus, the display should read "91". Press key **9** 2 times. Enter Rough Servo mode. Press key **8** to implement the tracking balance adjustment the display should now read "81".
4. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within 75° . Refer to the photographs supplied to determine the phase angle.
5. If the phase difference is determined to be greater than 75° try changing the pickup unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than 75° then the mechanism should be judged to be at fault.

• **Note**
Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" (the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

• **Hint**
Change the disc changes the clamp position and may decrease the "wobble".

Grating waveform

Ech→ Xch 20mV/div, AC
Fch→ Ych 20mV/div, AC

0˚

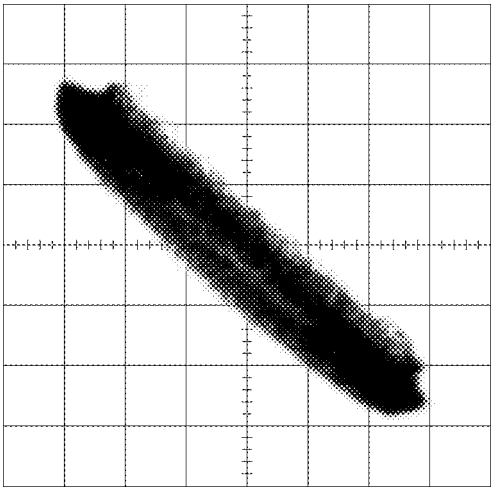

30˚

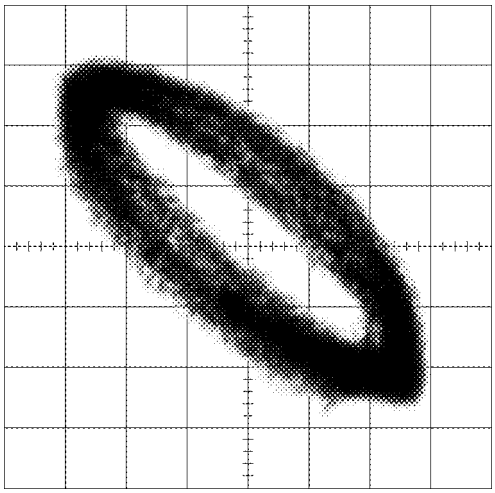

45˚

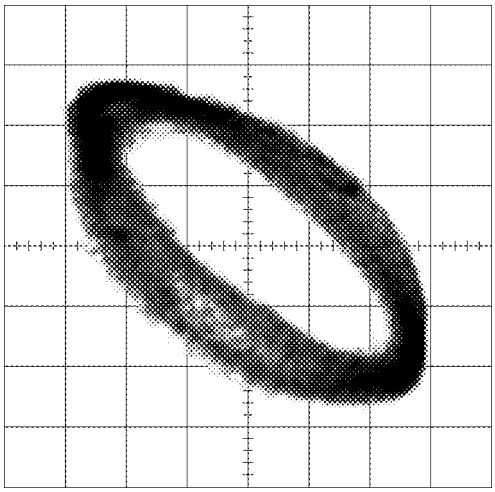

60˚

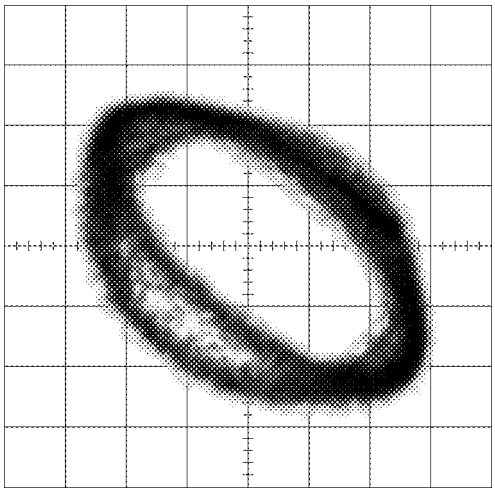

75˚

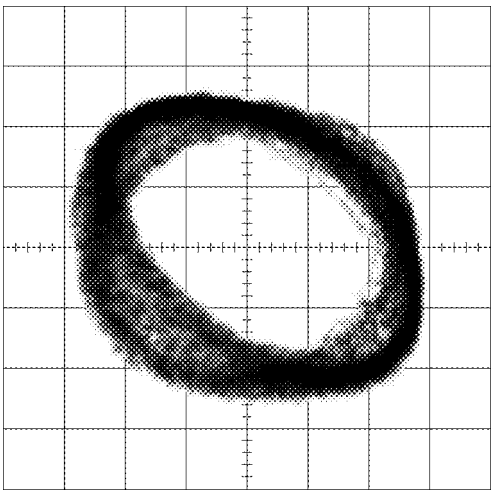

90˚

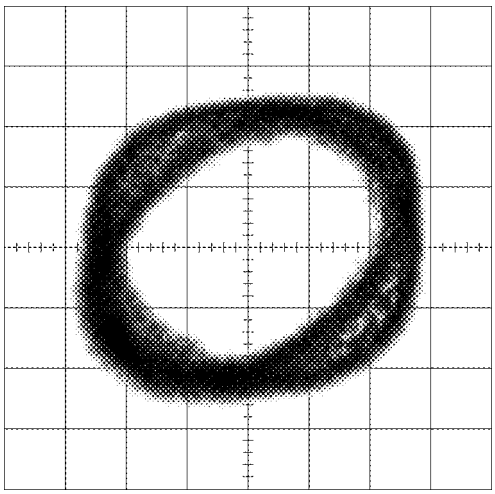

6.2 ADJUSTMENT OF ELEVATION WHEN THE CD CORE UNIT HAS BEEN REMOVED FOR MAINTENANCE

● **Adjustment When Error Code 60 is Displayed Because of Malfunctioning Elevation**

• **Note :**
This mechanisms is detects the height of the stage using slide-variable resistance.
To absorb dislocation of the stage height caused by differences in the mechanism and the CD core unit, adjustment must be made for each CD-mechanism module using a variable resistor.
Normally, readjustment is not needed, as this has been adjusted at the factory. However, adjustment of elevation is required according to the procedure explained below if an elevation error has occurred or if the CD core unit has been removed.

• **Purpose :**
To adjust and confirm whether or not elevation operates correctly.

• **Adjustment Method :**
• Measuring Equlpment: Oscilloscope, One L.P.F.
• Measuring Points : EREF, EPVO
• Setting : Without a magazine in Test mode
With the mechanism placed upside-down (Place the CD mechanism module so that the CD core unit is above.)

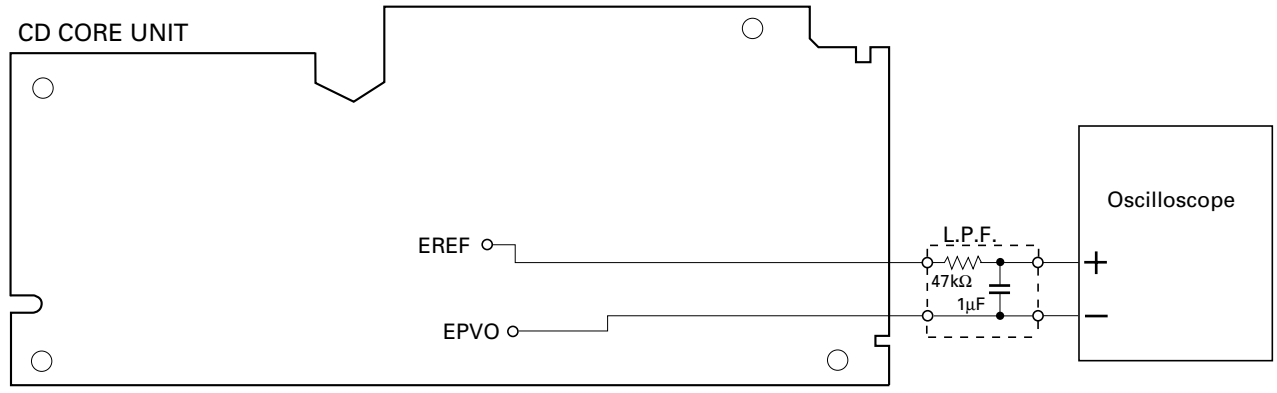

• **Confirmation Procedure**

1. Enter Test mode, then select Multi-CD player.
2. Press key **7** to enter Mechanism Test mode.
3. Press key **12** twice to specify the amount of movement.

Examples of display

TRACK	FUNCTION
	' "

TRACK	FUNCTION
72	00' 00"

The amount of movement changes each time key **12** is pressed.

maximum movement
↑ Key 12
↑ during movement
Key 12 ↑ Key 12
↑ minimum movement

TRACK	FUNCTION
72	00' 02"

TRACK	FUNCTION
72	00' 01"

TRACK	FUNCTION
72	00' 00"

Examples of display

4. Press key **9** to set ELV/TRAY mode to TRAY.

TRACK	FUNCTION
72	01' 02"

5. Press key **FF** to release the clamp and return the tray to the magazine.

Release the clamp

6. Press key **9** to enter Elevation Move mode.

TRACK	FUNCTION
72	00' 02"

7. Use key **FF/REV** to operate elevation and set if to the graduation of the sixth step (Fig. 1).

8. Make the adjustment.
   Use VR802 to adjust the difference in potential between EREF and EPVO to 0 ±10 mV.

9. When adjustment is completed, press key **BAND** to exit Mechanism Test mode.

TRACK	FUNCTION
72	00' 02"

10. Confirm operation of the mechanism.
    Place the mechanism horizontally (CD core unit below). Take care not to short-circuit the PCB.

TRACK	FUNCTION
	' "

11. Confirm the height of the stage. Use the DISC± key to select Disc No.6.

    Check if the stopper bend of the clamp lever is engaged in the groove of the frame stopper (Fig. 2-4).

TRACK	FUNCTION
04	00' 00"

• **Note :**
The stopper bend will be pressed downward into the groove for final clamping. Confirm the engagement position of the stopper bend.

• If the stopper bend is engaged in the center and pressed downward, adjustment is completed. Go to step 15.

• If the stopper bend is dislocated, check the amount of dislocation by following steps 12 to 14.

12. To see the amount of dislocation, place the mechanism upside-down. If the stopper bend has been dislocated in the direction of the first CD, turn VR802 to the left(Fig. 2).

    To lower the stage toward the twelfth step by 0.1 mm, reduce the voltage of EREF (adjusted in step 8) by 10 mV.

    If the stopper bend has been dislocated in the direction of the twelfth CD, turn VR802 to the right(Fig. 4).

    To raise the stage toward the first step by 0.1 mm, increase the voltage of EREF (adjusted in step 8) by 10 mV.

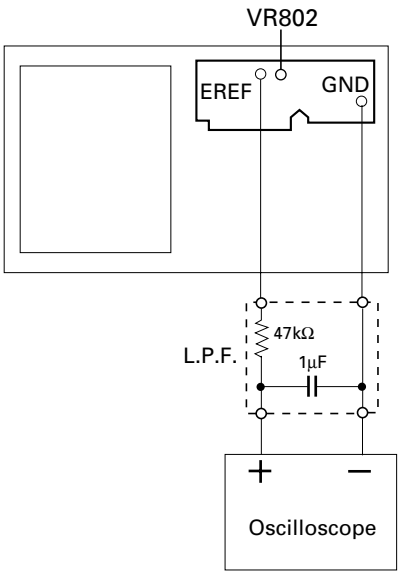

13. Place the mechanism horizontal. Go back to step 11 to reconfirm the stage height.

14. When adjustment of the stage height is completed, proceed as follows:

15. Press the **EJECT** switch.

16. Once operation of the mechanism has stopped, turn the power OFF.

17. Wait more than one minute after the power is turned off, then turn the power ON and insert a magazine.

18. Check if the mechanism operates correctly with the first, sixth, seventh and twelfth CDs.

19. If the mechanism operates properly, adjustment is completed. If the mechanism operates improperly, make the adjustment again.

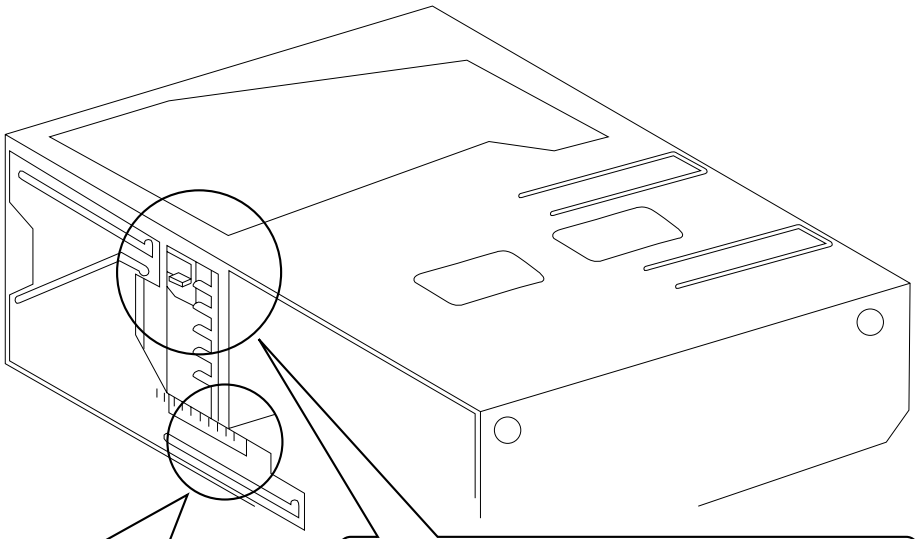

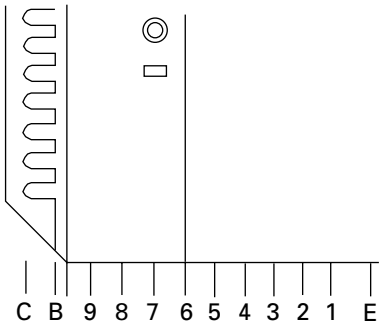

Adjust the insertion gate of magazine to the sixth scale.

Fig. 1

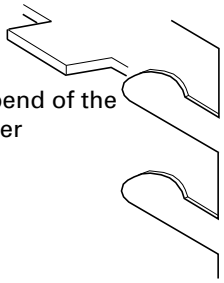

Dislocated toward the first CD.

Fig. 2



Engaged in the center and pressed downward.

Fig. 3

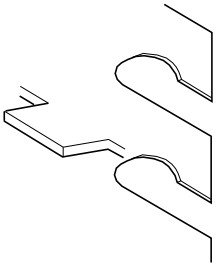

Dislocated toward the twelfth CD.

Fig. 4

7. GENERAL INFORMATION

7.1 IC

● **Pin Functions (UPD63710GC)**

Pin No.	Pin Name	I/O	Function and Operation
1	GND		Logic circuit GND
2	HOLD	I/O	Defect detection output
3	MIRR	I/O	MIRR output
4	FOK	O	RFOK signal output
5	$\overline{\text{RST}}$	I	Reset signal input
6	A0	I	Command/parameter identification signal input
7	$\overline{\text{STB}}$	I	Data strobe signal input
8	$\overline{\text{SCK}}$	I	Clock signal input for serial data input/output
9	SO	O	Serial data and status signal output
10	SI	I	Serial data input
11	VDD		Positive power supply terminal to logic circuit
12	DA.VDD		Positive power supply terminal to D/A converter
13	NC		Not used
14, 15	DA.GND		D/A converter GND
16	NC		Not used
17	DA.VDD		Positive power supply terminal to D/A converter
18	R+	O	Right channel audio data output
19	R-	O	Right channel audio data output
20	L-	O	Left channel audio data output
21	L+	O	Left channel audio data output
22	X.VDD		Positive power supply terminal to crystal oscillation circuit
23	$\overline{\text{XTAL}}$	O	Crystal oscillator connect pin
24	XTAL	I	Crystal oscillator connect pin
25	X.GND		Crystal oscillation circuit GND
26	VDD		Positive power supply terminal to logic circuit
27	EMPH	O	Output pin for the pre-emphasis data in the sub-Q code
28	FLAG	O	Flag output pin to indicate that audio data currently being output consists of noncorrectable data
29	DIN	I	Serial data input to internal DAC
30	DOUT	O	Serial audio data output
31	SCKIN	I	Serial clock input to internal DAC
32	SCKO	O	Audio data that is output from DOUT changes at rising edge of this clock
33	LRCKIN	I	LRCK signal input to internal DAC
34	LRCK	O	Signals to distinguish the right and left channels of the audio data output from DOUT
35	WDCK	O	Output double the frequency of LRCK
36	TX	O	Digital audio interface data output
37	GND		Logic circuit GND
38	C16M	O	Oscillator clock buffering output
39	LIMIT	I	Status of the pin is output at Bit 5 of the status output
40	VDD		Positive power supply terminal to logic circuit
41	LOCK	O	EFM synchronous detection signal
42	RFCK	O	Frame synchronous signal of XTAL-system
43	WFCK	O	Frame synchronous signal of PLL-system
44	PLCK	O	Monitor pin of bit clock
45	GND		Logic circuit GND
46	C1D1	O	Output pin for indicating the C1 error correction results
47	C1D2	O	Output pin for indicating the C1 error correction results
48	C2D1	O	Output pin for indicating the C2 error correction results
49	C2D2	O	Output pin for indicating the C2 error correction results
50	C2D3	O	Output pin for indicating the C2 error correction results
51	VDD		Positive power supply terminal to logic circuit

Pin No.	Pin Name	I/O	Function and Operation
52	PACK	O	CD-TEXT PACK synchronous signal
53	TSO	O	CD-TEXT data serial output
54	TSI	I	CD-TEXT control parameter serial input
55	$\overline{\text{TSCK}}$	I	CD-TEXT serial clock input
56	TSTB	I	CD-TEXT parameter strobe signal input
57	GND		Logic circuit GND
58	TEST	I	Test pin
59	ATEST	I/O	Test pin
60	RFMODE	I	Use/not use select for internal RF amplifier
61	A.GND		Analog circuit GND
62	FD	O	Focus drive output
63	TD	O	Tracking drive output
64	SD	O	Sled drive output
65	MD	O	Spindle drive output
66	DACO	O	DAC output for adjustment
67	FBAL	O	DAC output for adjustment
68	TBAL	O	DAC output for adjustment
69	TEVCA	O	DAC output for adjustment
70	A.VDD		Power supply terminal to analog circuit
71	EFM	O	EFM signal output
72	ASY	I	EFM comparator reference voltage input
73	C3T		3T detection capacitor additional pin
74	RFI	I	RF signal input for EFM data regulation
75	AGCO	O	RF signal output of after gain adjustment
76	AGCI	I	RF-AGC amplifier input
77	RFO	O	RF summing amplifier output
78	EQ2		RF amplifier equalizer parts additional pin
79	EQ1		RF amplifier equalizer parts additional pin
80	RF-	I	RF summing amplifier inverted input
81	A.GND		Analog circuit GND
82	A	I	Photo detector A input
83	C	I	Photo detector C input
84	B	I	Photo detector B input
85	D	I	Photo detector D input
86	F	I	Photo detector F input
87	E	I	Photo detector E input
88	A.VDD		Positive power supply terminal to analog circuit
89	REFOUT	O	Reference electric potential output
90	FE-	I	Focus error amplifier inverted input
91	FEO	I/O	Focus error amplifier output
92	TE-	I	Tracking error amplifier inverted input
93	TEO	I/O	Tracking error amplifier output
94	TE2	I/O	Tracking error output of after amplification
95	TEC	I	Tracking comparator input
96	A.GND		Analog circuit GND
97	PD	I	PD detection signal input for LD output monitor
98	LD	O	LD control current output
99	PN	I	APC circuit control polarity set pin
100	A.VDD		Positive power supply terminal to analog circuit

*UPD63710GC

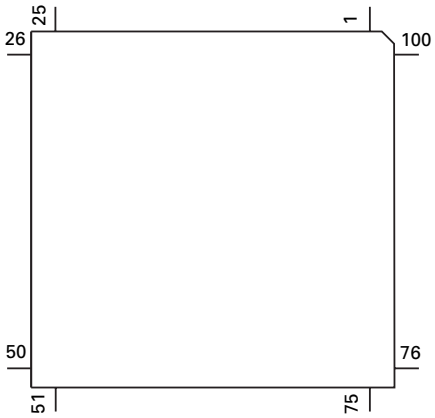

IC's marked by* are MOS type.
Be careful in handling them because they are very liable to be damaged by electrostatic induction.

BA05FP

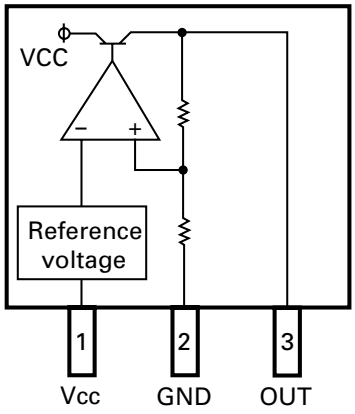

BA5986FM

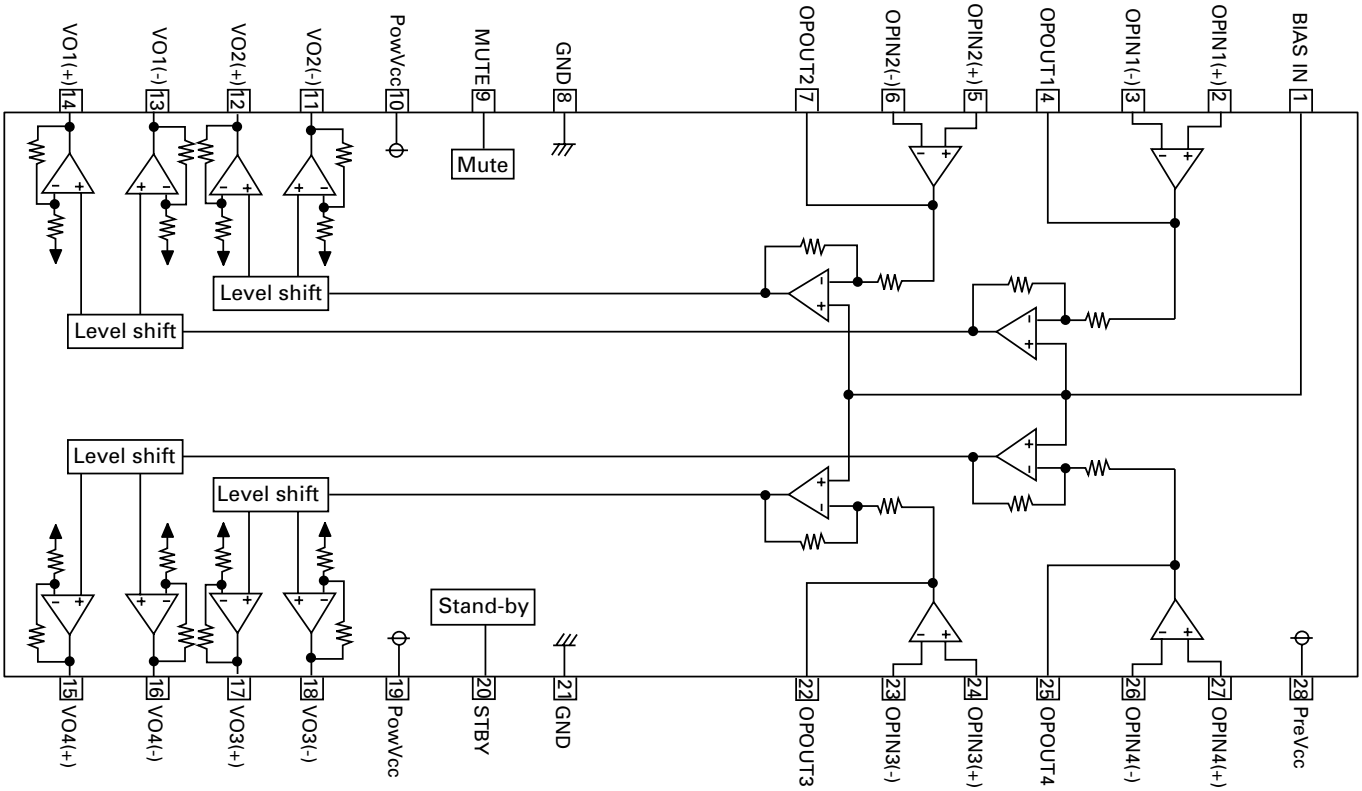

● **Pin Functions (PD5513A)**

Pin No.	Pin Name	I/O	Format	Function and Operation
1,2	NC			Not used
3	$\overline{\text{ADENA}}$	O	C	A/D reference voltage output
4	TXTSTE	O	C	TEXT parameter output
5	TXTSO	O	C	TEXT control parameter serial output
6	TXTSI	I		TEXT data serial input
7	TXTSCK	O	C	TEXT clock output
8	BYTE	I		VCC joint
9	CNVSS	I		VSS joint
10	POWER	O	C	CD +5V control
11	CONT	O	C	Servo driver output control
12	$\overline{\text{RESET}}$	I		Reset input
13	XOUT	O		Crystal oscillating element connection pin
14	VSS			GND
15	XIN	I		Crystal oscillating element connection pin
16	VCC			VDD
17	$\overline{\text{NMI}}$	I		Pull up
18	$\overline{\text{BSENS}}$	I		Back Up sense input
19	$\overline{\text{ASENS}}$	I		ACC power sense input
20	TXTPACK	I		TEXT PACK interrupt input
21	IPTA4IN	I		IPIN joint
22	$\overline{\text{IPPW}}$	O	C	Power supply control output for IP BUS interface IC
23	NC			Not used
24	CSEL	I		Compression select
25	SRAMSW	I		When there is SRAM,"H"
26	CCS	O	C	IP-BUS chip select
27,28	NC			Not used
29	IPIN	I		Data input from IP BUS interface IC
30	IPOUT	O	C	Data output for IP BUS interface IC
31,32	NC			Not used
33	FMIPSW	I		FM/IP BUS select switch
34	$\overline{\text{TESTIN}}$	I		Test program mode input
35	XSO	O	NM	LSI data output
36	XSI	I		LSI data input
37	XSCK	O	NM	LSI clock output
38	M6M12	I		6/12 disc select input
39–43	NC			Not used
44	$\overline{\text{RD}}$	O	C	SRAM enable output
45	NC			Not used
46	$\overline{\text{WR}}$	O	C	SRAM write enable output
47	NC			Not used
48	$\overline{\text{CS}}$	O	C	SRAM chip select
49	XA0	O		Control signal distinguishing data from microcomputer
50	$\overline{\text{XSTB}}$	O	C	CD LSI strobe output
51	$\overline{\text{XRST}}$	O	C	CD LSI reset output
52	MIRR	I		Mirror detector input
53	LOCK	I		Spindle lock detector input
54	FOK	I		FOK signal input
55	NC			Not used
56	A11	I		Address BUS input
57	A9	O	C	SRAM address bus output
58	A8	O	C	SRAM address bus output
59	A13	O	C	SRAM address bus output
60	A14	O	C	SRAM address bus output
61	A12	O	C	SRAM address bus output
62	VCC			VDD
63	A7	O	C	SRAM address bus output
64	VSS			GND

Pin No.	Pin Name	I/O	Format	Function and Operation
65–68	A6-A3	O	C	SRAM address bus output
69	A10	O	C	SRAM address bus output
70	A2 & (EPSK)	O	C	SRAM address bus output and (E2PROM clock output)
71	A1 & (EPDI)	O/I	C	SRAM address bus output and (E2PROM data input)
72	A0 & (EPDO)	O	C	SRAM address bus output and (E2PROM data output)
73	NC			Not used
74	$\overline{\text{EJSW}}$	I		Eject key switch interrupt input
75	$\overline{\text{MAG}}$	I		Magazine lock switch interrupt input
77	NC			Not used
78	I13	O	C	Motor driver control output
79	I2	O	C	Motor driver control output
80	I4	O	C	Motor driver control output
81–88	D0-D7	I/O	C	SRAM data bus
89,90	NC			Not used
91	DSP	I		DISC detect timing input
92	$\overline{\text{DISK}}$	I		Disc detector input
93	ELVPVO	I		Voltage input from ELV position sense
94	ELVREF	I		ELV reference voltage input
95	TRP	I		Tray position input
96	AVSS	I		A/D GND
97	VDIN			Power supply short sensor input
98	VREF	I		A/D converter reference voltage input
99	AVCC			A/D VCC
100	EPCS	I/O	C	E2PROM detect input , Chip select output

*PD5513A

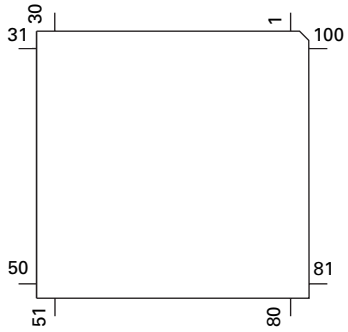

Format	Meaning
C	C MOS
NM	Middle resistivity N channel open drain

TC7SH32FU

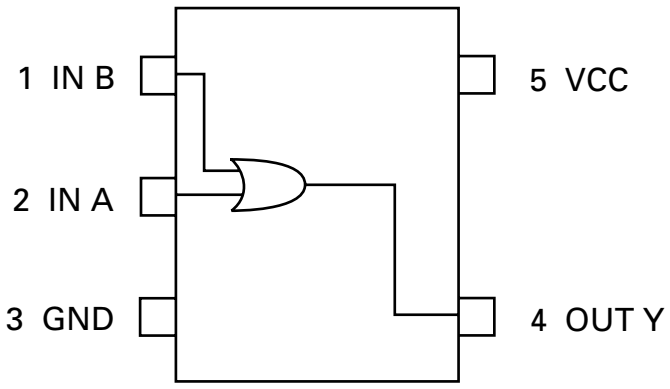

7.2 DIAGNOSIS

7.2.1 DISASSEMBLY

● **Removing the Upper Case(not shown)**

1. Remove the night screws.
2. Remove the Upper Case.

● **Removing the CD Mechanism Module**

1 Remove the four dampers(Fig.5).

2 Disconnect the connector(Fig.5).

3 Remove the two springs(Fig.5).

1 Disconnect the connector and then remove the CD Mechanism Module(Fig.6).

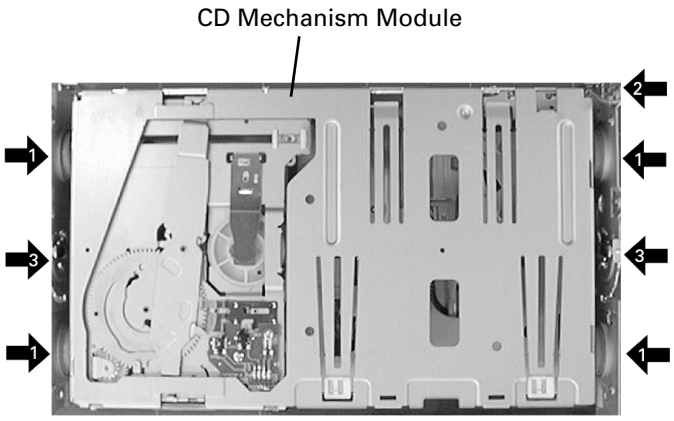

Fig.5

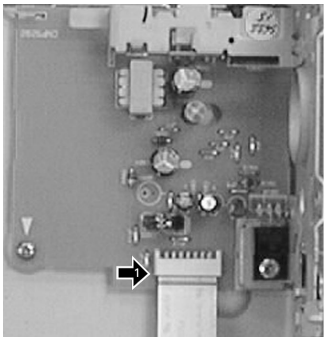

Fig.6

● **Removing the Grille Unit(not shown)**

1. Press the two tabs indicated by arrows and then pull out the Grille Unit.

● **Removing the Power Unit(Fig.7)**

1 Remove the two screws.

2 Remove the screw.

3 Remove the claw and remove the Power Unit.

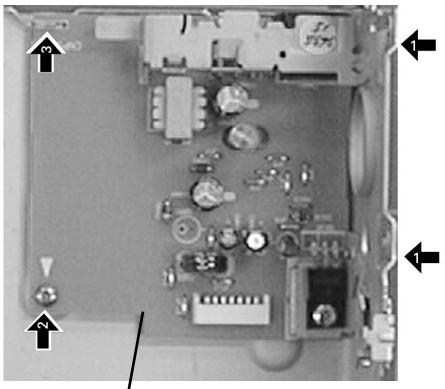

Power Unit

Fig.7

● Removing the Pickup Unit

1. Insert the short pin from the pickup unit in the flexible substrate.
2. Remove the flexible substrate from the connector.
3. Remove the flexible card from the connector.
4. Remove the lead wires to which the spindle motor and carriage motor assy were soldered.
5. Remove the two screws and lift the relay substrate up as shown in the figure on the upper right.

At this time, make sure that the flexible tray motor printed circuit board and flexible relay card are not pulled excessively.

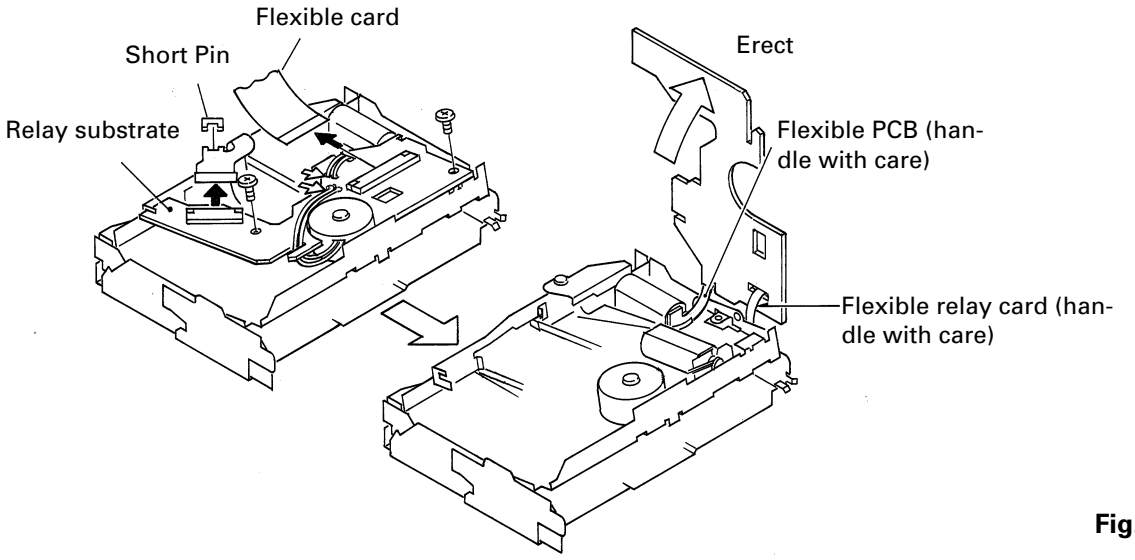

Fig.8

6. Remove screw A and then remove the carriage motor assy, lighting conductor, feed screw holder, feed screw and belt (see Fig. 9).
7. Remove screw B on the main side and the pickup unit together with the guide shaft (see Fig. 9).

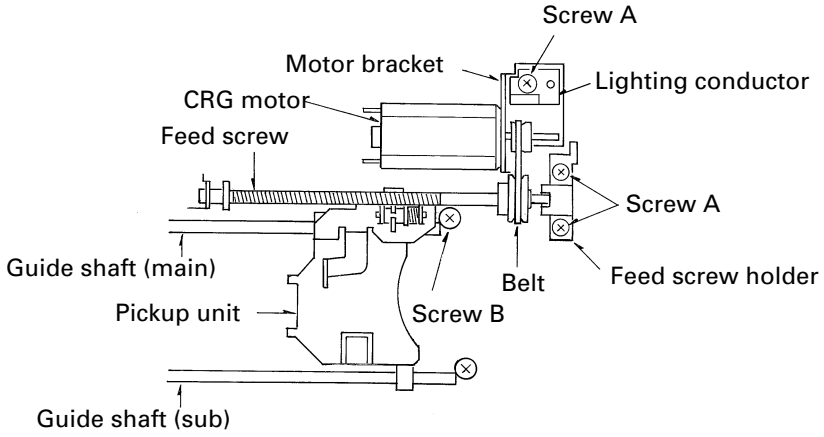

Fig.9

7.2.2 TEST MODE

● CD Test Mode

1) Precautions

- This unit uses a single power supply (+5V) for the regulator. The signal reference potential, therefore, is connected to REFO(approx. 2.5V) instead of GND.
  If REFO and GND are connected to each other by mistake during adjustments, not only will it be impossible to measure the potential correctly, but the servo will malfunction and a severe shock will be applied to the pick-up. To avoid this, take special note of the following.
  Do not connect the negative probe of the measuring equipment to REFO and GND together. It is especially important not to connect the channel 1 negative probe of the oscilloscope to REFO with the channel 2 negative probe connected to GND.
  Since the frame of the measuring instrument is usually at the same potential as the negative probe, change the frame of the measuring instrument to floating status.
  If by accident REFO comes in contact with GND, immediately switch the regulator or power OFF.

- Always make sure the regulator is OFF when connecting and disconnecting the various filters and wiring required for measurements.

- Before proceeding to further adjustments and measurements after switching regulator ON, let the player run for about one minute to allow the circuits to stabilize.

- Since the protective systems in the unit's software are rendered inoperative in test mode, be very careful to avoid mechanical and /or electrical shocks to the system when making adjustment.

- Disc detection during tray extraction and return operations is performed by means of the photo transistor in this unit. Consequently, if the inside of the unit is exposed to a strong light source with the outer casing removed for repairs or adjustment, the following malfunctions may occur:
  *Even with a disc loaded, the unit detects "no disc" and cannot start play.
  *Although a 12-cm disc is loaded, the unit detects "8cm disc" mistakenly.
  When the unit malfunctions this way, either re-position the light source, move the unit or cover the photo transistor.

- During exchanging discs, do not press the keys for the discs to be exchanged.

2) Test Mode

This mode is used for adjusting the CD mechanism module of the device.

- Test mode starting procedure
  Reset while pressing the **4** and **6** keys together.

- Test mode cancellation
  Switch ACC, back-up OFF.

- If the 8 or 9 key is pressed while focus search is in progress, immediately turn the power off (otherwise the actuator may be damaged due to the lens stuck).

- Jump operation of TRs other than 100TR continues after releasing the key. CRG move and 100TR jump operations are brought into the “Tracking close” status when the key is released.

- Powering Off/On resets the jump mode to “Single TR (91)”, the RF AMP gain setting to 0 dB, and the automatic adjustment value to the initial value.

- During exchanging discs, do not press the keys for the discs to be exchanged.

Key to adjustment text inside (12 keys type)	HEAD UNIT (6 keys type)
BAND	BAND
TRK+/FF	TRK+/FF
TRK-/REV	TRK-/REV
7	1
8	2
9	3
10	4
11	5
12	6
DISC-	DISC-
SOURCE ON/OFF	SOURCE ON/OFF

● Flow Chart

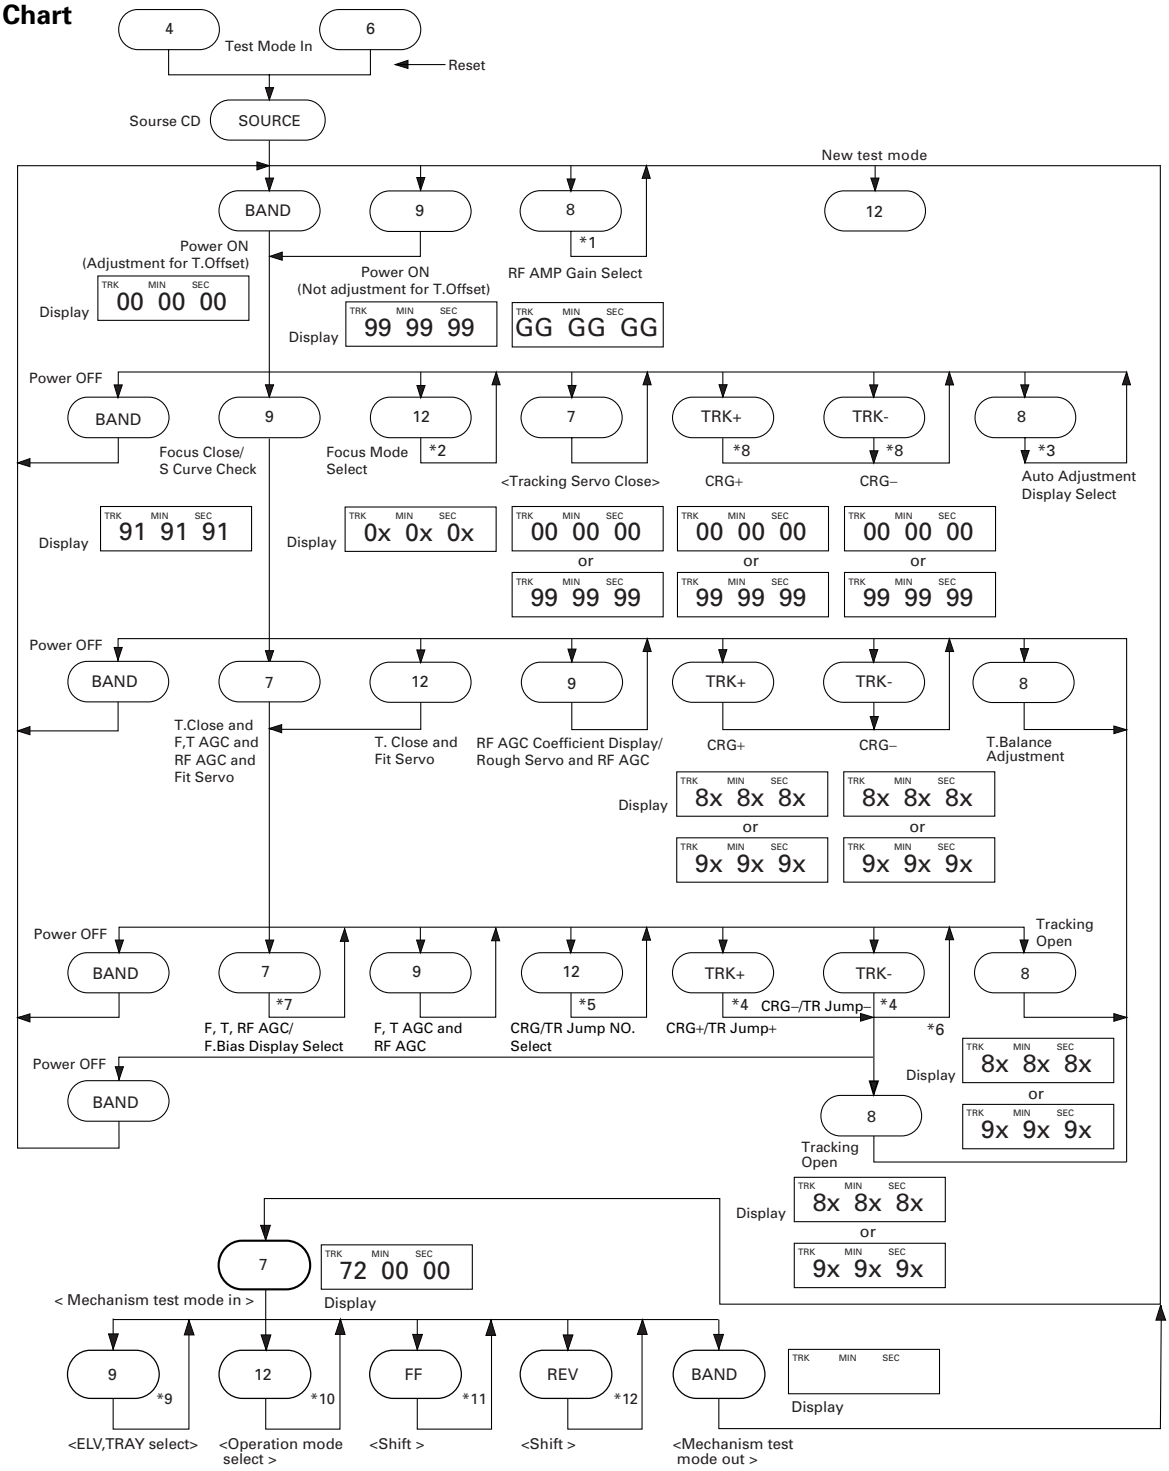

*1 TYP → +6dB → +12dB
Display 06 06 06 12 12 12

*2 Focus Close → S Curve Check
Display 00 00 00 (99 99 99) 01 01 01

*3 F.Offset Display → RF.Offset Display → F.Cansel Display
F.Cancel Value = {Top Rank 8bit of Set Value (7F [H] to 80 [H]) + 128} / 4
= 63 [D] to (32 [D]) to 00 [D]

*4 Single TR/32TR/100TR

*5 Single TR → 32TRK → 100TRK → CRG Move
Display 9x(8x):91(81) 92(82) 93(83) 94(84)

*6 CRG Move, 100TR Jump Only

*7 TRK, MIN, SEC → F.AGC Gain → T.AGC Gain → RF AGC Gain
(F,T.AGC Gain = (Present Value/Initial Value) × 20)

*8 Voltage of CRG Motor = 2 [V]

*9 ELV motor select → TRAY motor select
72 00 0X Display 72 10 0X

*10 8ms pulse drive → 24ms pulse drive → DC drive
72 00 00 Display 72 00 01 72 00 02
48ms pulse drive → 100ms pulse drive → DC drive
72 10 00 Display 72 10 01 72 10 02

*11 ELV select : ELV dowm (Disc 12 → 1)
TRAY select : TRAY out

*12 ELV select : ELV up (Disc 1 → 12)
TRAY select : TRAY in

● Error Messages

If a CD is not operative or stopped during operation due to an error, the error mode is turned on and cause(s) of the error is indicated with a corresponding number. This arrangement is intended at reducing nonsense calls from the users and also for facilitating trouble analysis and repair work in servicing.

(1) Basic Indication Method

1) When SERRORM is selected for the CSMOD (CD mode area for the system), error codes are written to DMIN (minutes display area) and DSEC (seconds display area). The same data is written to DMIN and DSEC. DTNO remains in blank as before.

2) Head unit display examples

Depending on display capability of LCD used, display will vary as shown below. xx contains the error number.

8-digit display	6-digit display	4-digit display
ERROR–xx	ERR–xx OR Err–xx	E–xx

* When the system is manufactured for an OEM basis, the error display will be configured according to the customer specification.

(2) Error Code List

Code	Class	Displayed error code	Description of the code and potential cause(s)
10	Electricity	Carriage Home NG	CRG can't be moved to inner diameter. CRG can't be moved from inner diameter. → Failure on home switch or CRG move mechanism.
11	Electricity	Focus Servo NG	Focusing not available. → Stains on rear side of disc or excessive vibrations on REWRITABLE.
12	Electricity	Spindle Lock NG	Spindle not locked. Sub-code is strange (not readable). → Failure on spindle, stains or damages on disc, or excessive vibrations.
		Subcode NG	A disc not containing CD-R data is found. Turned over disc are found, though rarely. → Failure on home switch or CRG move mechanism.
		RF AMP NG	An appropriate RF AMP gain can't be determined. → CD signal error.
17	Electricity	Setup NG	APC protection doesn't work. Focus can be easily lost. → Damages or stains on disc, or excessive vibrations.
30	Electricity	Search Time Out	Failed to reach target address. → CRG tracking error or damages on disc.
A0	System	Power Supply NG	Power (VD) is ground faulted. → Failure on SW transistor or power supply (failure on connector).
A1	System	Mechanism power failure	Mechanism elevation reference voltage is out of prescription. →EREF adjustment VR and/or power abnormal.
50	Mechanism	An error upon ejection	MAG switch release time has time out. Elevation time out when eject.
60	Mechanism	An error while putting in and out the tray	Tray in / out time has time out. Tray is caught when put in.

Code	Class	Displayed error code	Description of the code and potential cause(s)
70	Mecha-nism	An error upon elevation	Elevation time has time out.
80	Mecha-nism	An error with an em-pty magazine inserted	No disc is available.

Remarks: Unreadable TOC does not constitute an error. An intended operation continues in this case.
A newly designed head unit must conform to the example given above.
Upper digits of an error code are subdivided as shown below:
1x: Setup relevant errors, 3x: Search relevant errors, 3x: Search relevant errors, Ax: Other errors.

● New Test Mode

M-CD plays the same way as before.
If an error such as off focus, spindle unlocking, unreadable sub-code, or sound skipping occurs after setup, its cause and time occurred (in absolute time) are displayed.
During setup, operational status of the control software (internal RAM: CPOINT) is displayed.
These displays and functions are prepared for enhancing aging in the servicing and efficiency of trouble analysis.

(1) Shifting to the New Test Mode

① Turn on the current test mode by starting the reset from the 4 and 6 keys together.
② Select M-CD for the source through the specified procedure including use of the [SOURCE] key. Then, press the 12 key while maintaining the regulator turned off.
③ After the above operations, the new test mode remains on irrespective of whether the M-CD is turned on or off. You can reset the new test mode by turning on the reset start.
* With some products, the new test mode can be reset through the same operations as that employed for shifting to the STBY mode (while maintaining the Acc turned off).

(2) Key Correspondence

Key	Test mode		New test mode	
(Example)	Power Off	Power On	In-play	Error Production
BAND	To power on (offset adjustment performed)	To power off	–	Time/Err.No. switching
UP	–	FWD-Kick	FF/TR+	–
DOWN	–	REV-Kick	REV/TR-	–
7	–	T.Close (AGC performed) /parameter display switching	Scan	–
8	RF AMP gain switching	Parameter display switching /T.BAL adjustment/T.Open	Mode	–
9	To power on (offset adjustment not performed)	F.Close/RF AGC/F.T.AGC	–	–
10	–	F.Open	–	–
11	–	Jump Off	–	–
12	–	F.Mode switching /T.Close (no AGC)/Jump switching	Auto/Manu	T.No./Time switching

Key (Example)	Mechanism Test Mode
BAND	Back to the test mode
UP	Playing the mechanism
DOWN	Playing the mechanism
7	Mechanism test mode in
8	–
9	TRAY/ELV select
10	–
11	–
12	Operation step select

Note: Eject and CD on/off is performed in the same procedure as that for the normal mode.

(3) Cause of Error and Error Code

Code	Class	Contents	Description and cause
40	Electricity	Off focus detected.	FOK goes low. → Damages/stains on disc, vibrations or failure on servo.
41	Electricity	Spindle unlocked.	FOK = Low continued for 50 msec. → Damages/stains on disc, vibrations or failure on servo.
42	Electricity	Sub-code unreadable.	Sub-code was unreadable for 50 msec. → Damages/stains on disc, vibrations or failure on servo.
43	Electricity	Sound skipping detected.	Last address memory function was activated. → Damages/stains on disc, vibrations or failure on servo.

Note: Mechanical errors during aging are not displayed.
The error codes should be indicated in the same way as in the normal mode.

(4) Display of Operational Status (CPOINT) during Setup

Status No.	Contents	Protective action
00	CD+5V ON process in progress.	None
01	Servo LSI initialization (1/3) in progress.	None
02	Servo LSI CRAM initialization in progress.	None
03	Servo LSI initialization (2/3) in progress.	None
04	Offset adjustment (1/3) in progress.	None
05	Offset adjustment (2/3) in progress.	None
06	Offset adjustment (3/3) in progress.	None
07	FZD adjustment in progress.	None
08	Servo LSI initialization (3/3) in progress.	None
10	Carriage move to home position started.	None
11	Carriage move to home position started.	None
12	Carriage is moving toward inner diameter.	Specified 10 seconds has been passed or failure on home switch.
13	Carriage is moving toward outer diameter.	Specified 10 seconds has been passed or failure on home switch.
14	Carriage outer kick in progress.	None
15	Carriage outer diameter feed (1 second) in progress.	None
20	Servo close started.	None
21	Pre-processing for focus search started.	None
22	Spindle rotation and focus search started.	None
23	Waiting for focus close (XSI=Low).	Specified focus search time has been passed.
24	Standing by after focus close is over.	Specified focus search time has been passed.
25	Focus search preprocessing is in progress while setup protection is turned on.	None

Status No.	Contents	Protective action
26	Focus search preprocessing is in progress while focus recovery is turned on.	None
27	Wait time after focus close is set up.	Off focus.
28	Standing by after focus close is over.	Off focus.
29	Setup (1/2) before T balance adjustment is started.	Off focus.
30	Setup (2/2) before T balance adjustment is started.	Off focus.
31	T balance adjustment started.	Off focus.
32	T balance adjustment (1/2).	Off focus.
33	T balance adjustment (2/2).	Off focus.
34	Waiting for spindle rotation to end. Spindle rough servo.	Off focus.
35	Standing by after spindle rough servo is over.	Off focus.
36	RF AGC started.	Off focus.
37	RF AGC started.	Off focus.
38	RF AGC ending process in progress.	Off focus.
39	Tracking close in progress.	Off focus.
40	Standing by after tracking is closed. Carriage closing in progress.	Off focus.
41	Focus/tracking AGC started.	Off focus.
42	Focus AGC started.	Off focus.
43	Focus AGC in progress.	Off focus.
44	Tracking AGC in progress.	Off focus.
45	Standing by after focus/tracking AGC are over.	Off focus.
46	Spindle processes applicable servo.	Off focus.
47	Check for servo close is started.	Off focus.
48	Check of LOCK pin started.	Off focus or spindle not locked.
49	RF AGC started.	Off focus.
50	RF AGC in progress.	Off focus.
51	Standing by after RF AGC is over.	Off focus.

(5) Display Examples

1) During Setup (When status no. = 11)

TRK No.	MIN.	SEC.
11	11'	11"

2) During Operation (TOC read, TRK search, Play, FF and REV)

The same as in the normal mode.

3) When a Protection Error Occurred

Switch to the following displays (A) and (B) using the [BAND] switch:

(A) Error occurrence timing display in absolute time.

An example: Error occurred in 12th tune at 34'56" in absolute time.

TRK No.	MIN.	SEC.
12	34'	56"

(B) Error No. display

An example: Error #40 (Off focus is detected)

ERROR-40

7.3 BLOCK DIAGRAM

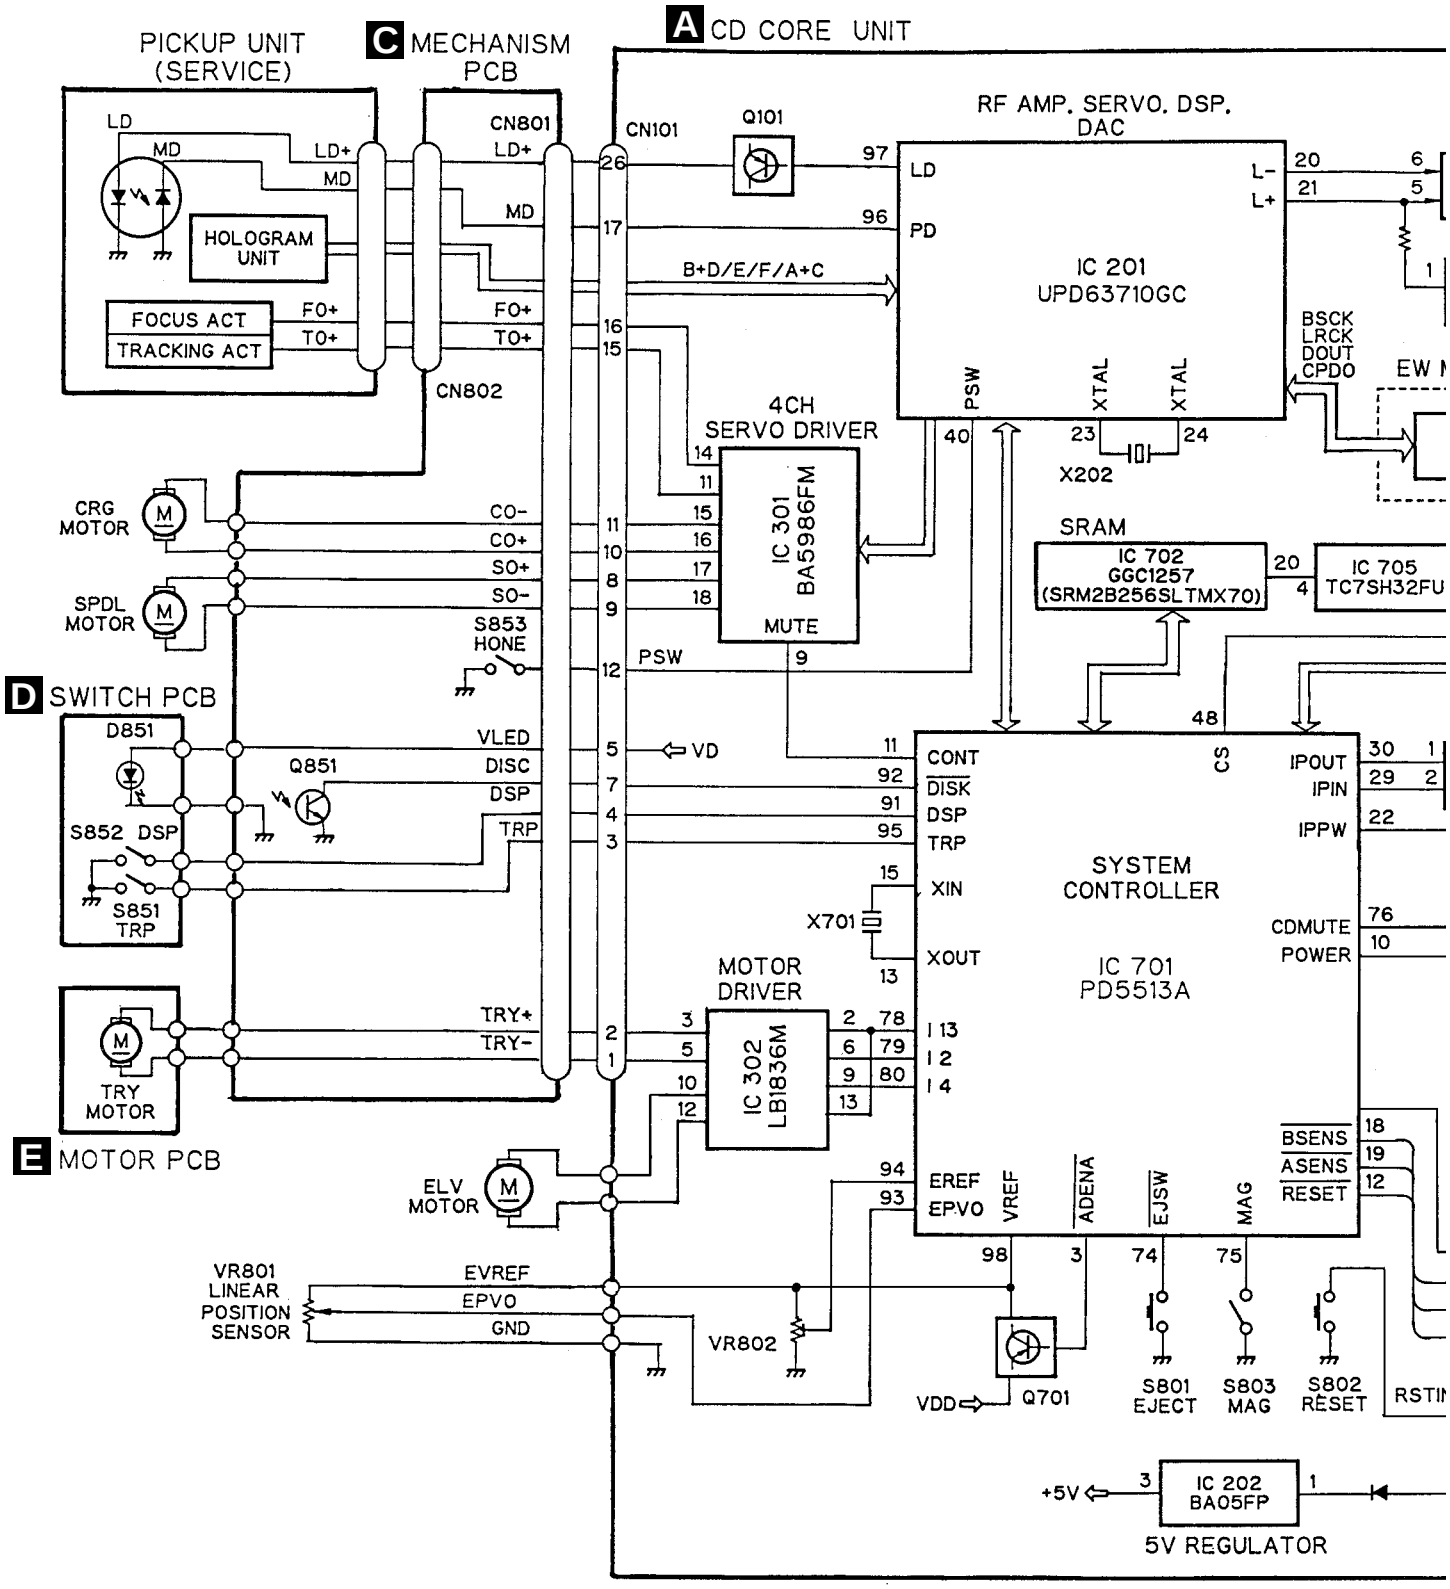

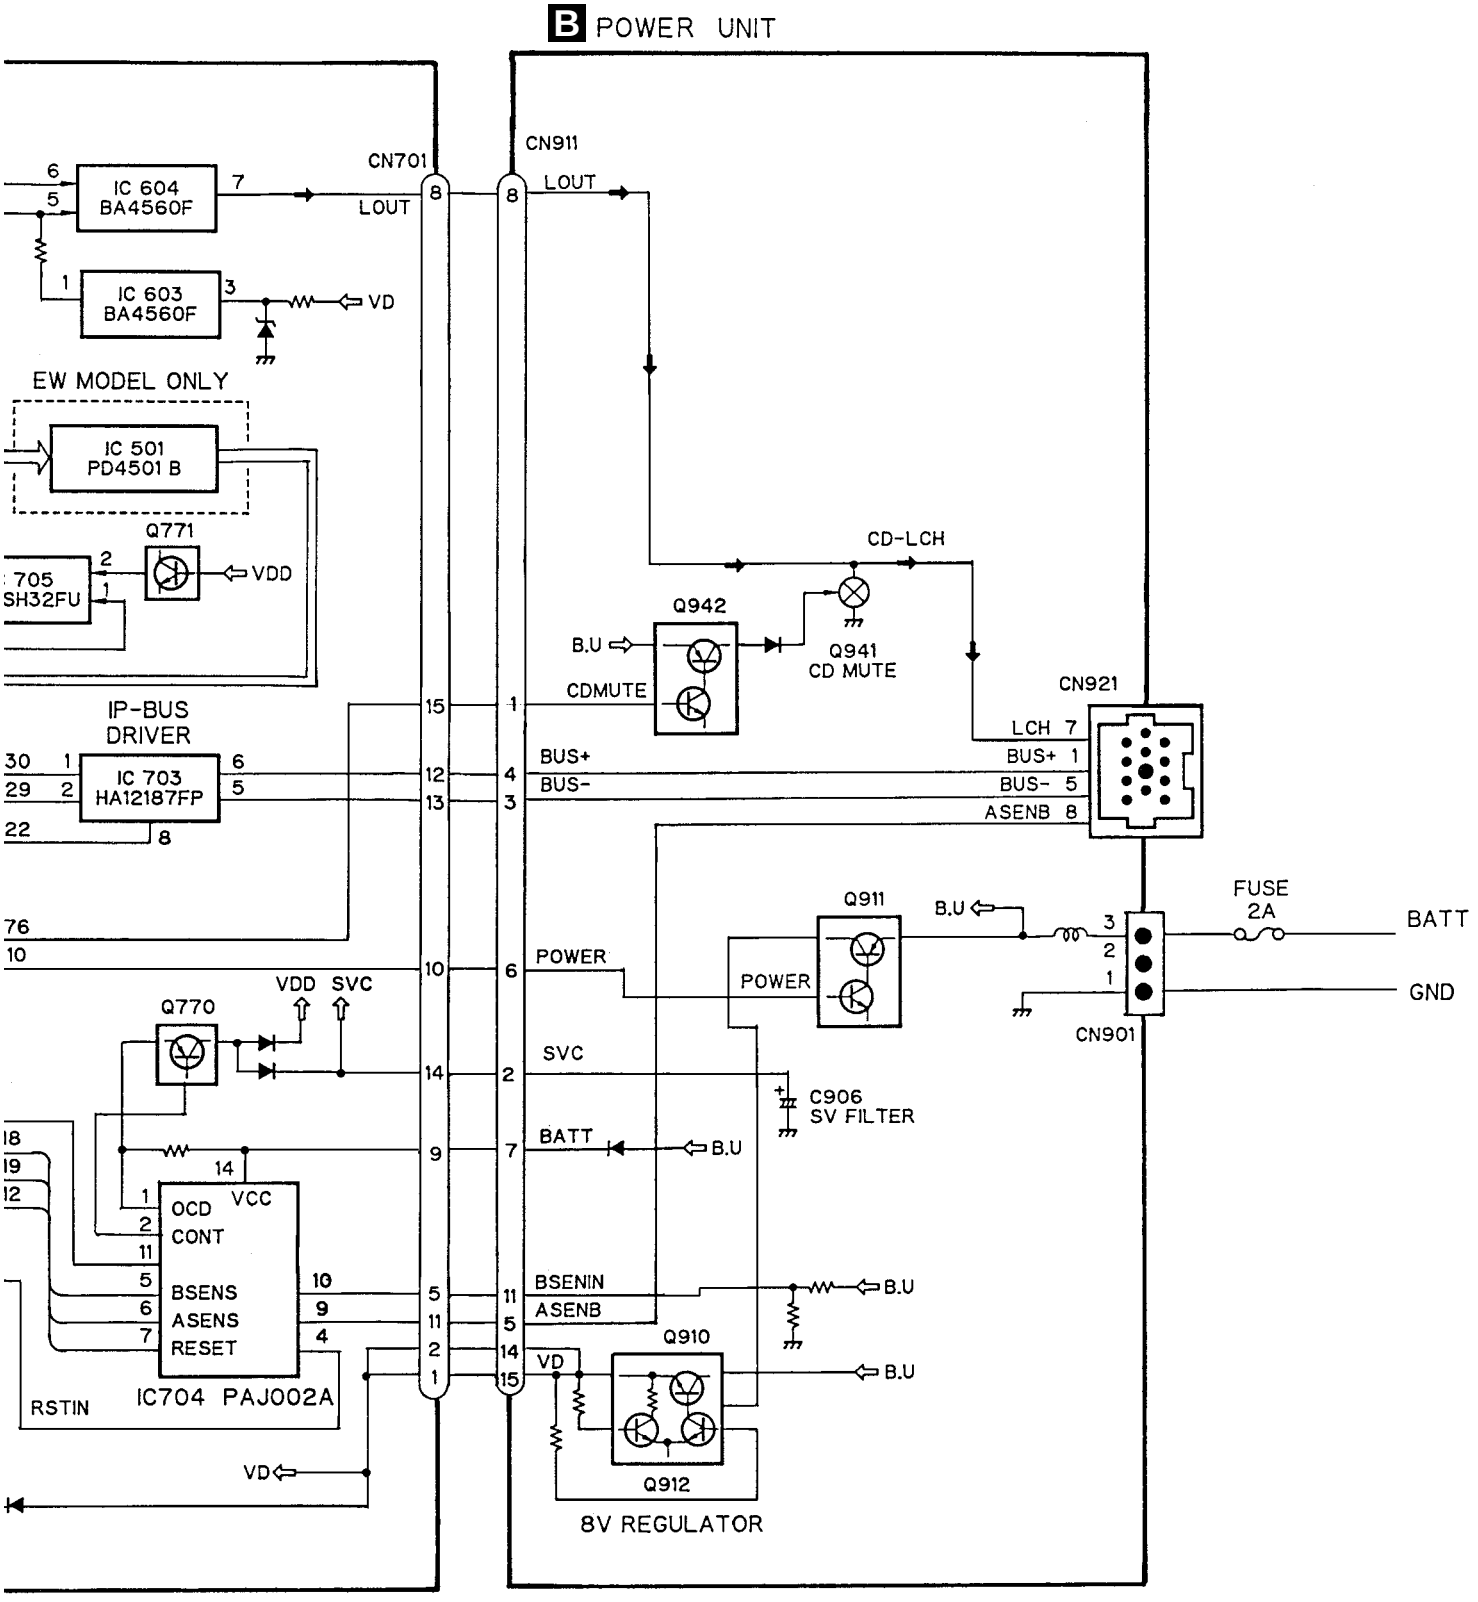
B POWER UNIT
CN701
CN911
IC 604
BA4560F
LOUT
IC 603
BA4560F
VD
EW MODEL ONLY
IC 501
PD4501 B
Q771
VDD
CD-LCH
Q942
Q941
CD MUTE
B.U
CDMUTE
CN921
LCH 7
BUS+ 1
BUS- 5
ASENB 8
IP-BUS
DRIVER
IC 703
HA12187FP
BUS+
BUS-
Q911
FUSE
2A
BATT
GND
POWER
CN901
VDD SVC
Q770
SVC
C906
SV FILTER
BATT
VCC
OCD
CONT
BSENS
ASENS
RESET
BSENIN
ASENB
Q910
IC704 PAJ002A
RSTIN
Q912
8V REGULATOR

8. OPERATIONS AND SPECIFICATIONS

8.1 OPERATION

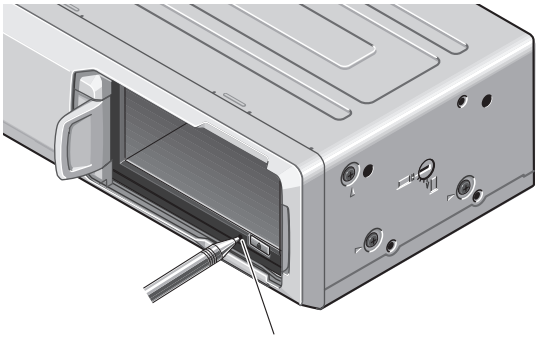

If the power does not switch on or if the compact disc player does not operate when the button on the multi-CD controller is pressed, or if the multi-CD controller display is incorrect, press this button on the player with the tip of a pencil to restore normal operation. (This button is located inside the door.) **Always press the clear button on the multi-CD controller, too, after pressing this button.**

- If the clear button is pressed when the player contains a magazine or the ignition switch is set to the ON or ACC position, the CD title display and ITS memory are cleared.

8.2 SPECIFICATIONS

General

System ..... Compact disc audio system
Usable discs ..... Compact Disc
Signal format ..... Sampling frequency: 44.1 kHz
Number of quantization bits: 16; linear
Power source ..... 14.4 V DC
(10.8 — 15.1 V allowable)
Max. current consumption ..... 1.0 A
Weight ..... 2.2 kg (4.9 lbs.)
Dimensions ..... 257 (W) × 94 (H) × 172 (D) mm
[10-1/8 (W) × 3-11/16(H) × 6-3/4 (D) in.]

Audio

Frequency characteristics ..... 5 — 20,000 Hz (± 1 dB)
Signal-to-noise ratio ..... 92 dB (1 kHz) (IHF-A Network)
Distortion ..... 0.005 %
Dynamic range ..... 90 dB (1 kHz)
Output level ..... 1,000 mV (1 kHz, 0 dB)
Number of channels ..... 2 (stereo)

Note:

Specifications and design are subject to possible modification without prior notice due to improvements.